# **TECHNICAL MANUAL**

# ORGANIZATIONAL MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST

**FOR** 

RADIO SET AN/GRC-106A (NSN 5820-00-223-7548)

Distribution authorized to athe Department of Defense and DOD contractors only for official use or for administration or oporational purposes. This determination was made on 10 April 1989. Other requests for this document will be refered to Commander, US Army Communications-Electronics Command and Fort Monmouth, ATTN: AMSEL-LC-ME-P, Fort Monmouth, NJ 07703-5000.

DESTRUCTION NOTICE – Destroy by any method that will prevent disclosure of contents or reconstruction of the document.

HEADQUARTERS, DEPARTMENT OF THE ARMY
1 AUGUST 1989

Technical Manual

HEADQUARTERS
DEPARTMENT OF THE ARMY
Washington, DC, 1 August 1989

No. 11-5820-520-20P-2

ORGANIZATIONAL MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LIST
FOR
RADIO SET AN/GRC-106A
(NSN 5820-00-223-7548)

Current as of 28 July 1989

#### REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2 located in back of this manual direct to: Commander, US Army Communications-Electronics Command and Fort Monmouth, ATTN: AMSEL-LC-ME-PS, Fort Monmouth, New Jersey 07793-5000.

In either case, a reply will be furnished direct to you.

#### Table of Contents

		Illus
		Figure
		1
		1
UΙ	parts authorized)	
	0101 Panel-Chassis Assembly 1A1 3-1	3
		4
	01010101 Front End Protection Assembly	
	1A1A1A10 (No parts authorized)	
	010102 Chassis Assembly 1A1A2 (No parts authorized)	
	01010201 Internal ALC Assembly 1A1A2A5	
	<u>-</u>	
	01010203 Voltage Regulator Assembly	
	the state of the s	
	· · · ·	
	authorized)	
		II. Repair Parts List

<sup>\*</sup>This manual supersedes TM 11-5820-520-20P-2, 27 April 1978.

			Page	Illus Figure
Group		0102 100 kHz Synthesizer 1A2 (No		
		parts authorized) 0103 Frequency Standard Module 1A3 (No parts authorized)		
		0104 10 and 1 kHz Synthesizer  Module 1A4 (No parts authorized)		
		0105 Transmitter IF and Audio  Module 1A5 (No parts authorized)		
		0106 Frequency Dividers Module 1A6 (No parts authorized)		
		0107 Receiver IF Module 1A7 (No parts authorized)		
		0108 Translator Module 1A8 (No parts authorized)		
		0109 MHz Synthesizer Module 1A9 (No parts authorized)		
		0110 Receiver Audio Module 1A10 (No		
		parts authorized) 0111 DC-to-DC Converter and Regulator Module 1A11 (No parts authorized)		
		0112 RF Amplifier Module 1A12 (No parts authorized)		
		0113 Case Assembly 1A13 (No parts authorized)		
(	02	Amplifier, Radio Frequency AM-3349/GRC- 106 (No parts authorized)		
		0201 Chassis-Panel Assembly 2A1 (No parts		
		authorized) 020101 Chassis Assembly 2A1A1 (No parts authorized)		
		02010101 Power Amplifier Plenum 2A1A1A2 (No parts authorized)		
		0201010101 Voltage Regulator Assembly 2A1A1A2A2 (No parts authorized)		
		0201010102 Automatic Phase Control Tune Assembly 2A1A1A2A4 (No parts authorized)		
		02010102 Electrical Chassis 2A1A1A3 (No parts authorized)		
		020102 Power Amplifier Panel 2A1A5	30-1	30
		02010202 DC-to-DC Assembly 2A (No parts authorized)		
		0201020201 Screen Rectifier Assembly 2A1A5A2A4 (No parts authorized)		

Illus Page Figure

0201020202 Start Circuit Assembly Group 2A1A5A2A6 (No parts authorized) Plate Assembly 2A1A5A3 (No 02010203 parts authorized) 02010204 Gear Drive Assembly 2A1A5A4 (No parts authorized) 02010205 Terminal Board Assembly 2A1A5A5 (No parts authorized) 02010206 Front Panel Assembly 2A1A5A6 (No parts authorized) Protection Circuit Assembly 02010207 2A1A5A7 (No parts authorized) 0202 Turret Assembly 2A2 (No parts authorized) 020201 Drum, Turret 2A2A1 (No parts authorized) 020202 Drive, Turret 2A2A2 (No parts authorized) 0203 Antenna Coupler Assembly 2A3 (No parts authorized) 0204 Discriminator Assembly 2A4 (No parts authorized) 0205 Case Assembly 2A6 (No parts authorized) 020501 Inverter Assembly 2A6A1 (No parts authorized) Relay Assembly 2A7 (No parts 0206 authorized) 0207 Driver Assembly 2A8 (No parts authorized) 0208 PA Stator Assembly 2A9 (No parts authorized) Mounting Assembly MT-3140/GRC-106 (No 0.3 parts authorized) Interconnecting Cables (See Group 00 04 for parts) Antenna Group AN/GRA50 (See TM 11-5820-05 467-24P for parts) Loudspeaker LS-166/U (No parts 06 authorized) 07 Grounding Kit (Not used) Mast Base AB-652/GR (No parts authorized) 08 Mast Sections MS-116A, MS-117A and MS-09 118A (No parts authorized) Telegraph Key KY-116/U (No parts 10 authorized) Headset H-227/U (No parts authorized) 11

		Page	Illus Figure
Group Section	Microphone M-29B/U (No parts authorized) Special Tools List (Not applicable) Cross-Reference Indexes National Stock Number Index	-2	

# SECTION I INTRODUCTION

#### 1. Scope

This manual lists and authorizes spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE); and other special support equipment required for performance of organizational maintenance of the AN/GRC-106A. It authorizes the requisitioning, issue, and disposition of spares, repair parts, and special tools as indicated by the source, maintenance and recoverability (SMR) codes.

#### 2. General

This Repair Parts and Special Tools List is divided into the following sections:

<u>a. Section II. Repair Parts List</u> A list of spares and repair parts authorized by this RPSTL for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in ascending numeric sequence, with the parts in each group listed in ascending item number sequence. Figure numbers are listed directly beneath the group header.


#### b. Section III. Special Tools List. Not applicable.

c. Section IV. Cross-Reference Indexes. A list, in National item identification number (NIIN) sequence, of all National stock numbered items appearing in the listing, followed by a list in alphameric sequence of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration figure and item number appearance. The figure number and item number index lists figure and item numbers in numeric sequence and cross-references National stock number, Federal Supply Code for Manufacturer and part numbers.

#### 3. Explanation of Columns (Section II and III)

<u>a.</u> <u>Item No. (Column (1)).</u> Indicates the number used to identify items called out in the illustration.


<u>b. SMR Code (Column (2)).</u> The source, maintenance, and recoverability (SMR) code is a five-position code containing supply/requisitioning information, maintenance category authorization criteria, and disposition instructions, as shown in the following breakout:

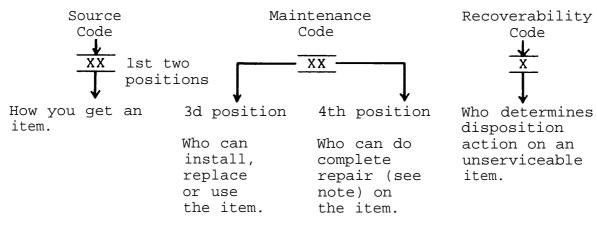

NOTE

Complete repair: Maintenance capacity, capability, and authority to perform all corrective maintenance tasks of the "repairs" function in a use/user environment in order to restore serviceability to a failed item.

(1) <u>Source code.</u> The source code tells you how to get an item needed for maintenance, repair, or overhaul of an end item/equipment. Explanations of source codes follows:

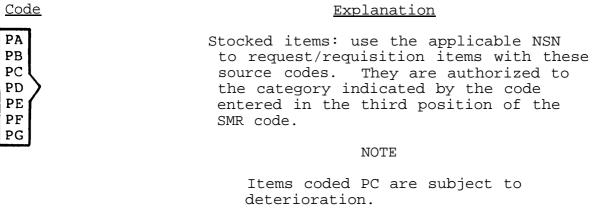

KD KF KB

Items with these codes are not to be requested/requisitioned individually. They are part of a kit which is authorized to the maintenance category indicated in the third position of the SMR code. The complete kit must be requestioned and applied.

#### <u>Code</u>

# MO - Made at org/AVUM category

- MF Made at DS/AVIM category
- MH Made at GS category
- ML Made at
  Specialized
  Repair
  Activity
  (SRA)
- MD Made at Depot
- AO Assembled by org/AVUM category
- AF Assembled by DS/AVIM category
- AH Assembled by GS category
- AL Assembled by SRA
- AD Assembled by Depot

#### Explanation

Items with these codes are not to be requested/requisitioned individually. They must be made from bulk material which is identified by the part number in the description and usable on code (UOC) column and listed in the Bulk Material group of the repair parts list. If the item is authorized to you by the third position code of the SMR code, but the source code indicates it is made at a higher category, order the item from the higher category of maintenance.

Items with these codes are not to be requested/requisitioned individually. The parts that make up the assembled item must be requisitioned or fabricated and assembled at the category of maintenance indicated by the source code. If the third position code of the SMR code authorizes you to replace the item, but the source code indicates the item is assembled at a higher category, order the item from the higher category of maintenance.

#### Code

#### Explanation

- XA Do not requisition an "XA" coded item. Order its next higher assembly.
- XB If an "XB" item is not available from salvage, order it using the FCSM and part number given.
- XC Installation drawing, diagram, instruction sheet, field service drawing, that is identified by manufacturer's part number.
- XD Item is not stocked. Order an "XD" coded item through normal supply channels using the FSCM and part number given, if no NSN is available.

#### NOTE

Cannibalization or controlled exchange, when authorized, may be used as a source of supply for items with the above source codes, except for those source coded "XA" or those aircraft support items restricted by requirements of AR 750-1.

- (2) Maintenance code. Maintenance codes tell you the category of maintenance authorized to USE and REPAIR support items. The maintenance codes are entered in the third and fourth positions of the SMR code as follows:
- (a) The maintenance code entered in the third position tells you the lowest maintenance category authorized to remove, replace, and use an item. The maintenance code entered in the third position will indicate authorization to one of the following categories of maintenance.

#### Code

#### Application/Explanation

- C Crew or operator maintenance done within organizational or aviation maintenance.
- 0 Organizational or aviation unit category can remove, replace, and use the item.
- F Direct support or aviation intermediate category can remove, replace, and use the item.
- H General support category can remove, replace, and use the item.
- L Specialized repair activity can remove, replace, and use the item.
- D Depot category can remove, replace, and use the item.
- (b) The maintenance code entered in the fourth position tells whether or not the item is to be repaired and identifies the lowest maintenance category with the capability to do complete repair (i.e., perform all authorized repair functions). This position will contain one of the following maintenance codes.

#### NOTE

Some limited repair may be done on the item at a lower category of maintenance, if authorized by the Maintenance Allocation Chart (MAC) and SMR codes.

#### <u>Code</u>

# Application/Explanation

- o Organizational or aviation unit is the lowest category that can do complete repair of the item.
- F Direct support or aviation intermediate is the lowest category that can do complete repair of the item.
- H General support is the lowest category that can do complete repair of the item.
- L Specialized repair activity (designate the specialized repair activity) is the lowest category that can do complete repair of the item.
- D Depot is the lowest category that can do complete repair of the item.

#### Code

#### Application/Explanation

- Z Nonreparable. No repair is authorized.
- B No repair is authorized. (No parts or special tools are authorized for the maintenance of a "B" coded item.)

  However, the item may be reconditioned by adjusting, lubricating, etc., at the user category.
- (3) Recoverability code. Recoverability codes are assigned to items to indicate the disposition action on unserviceable items. The recoverability code is entered in the fifth position of the SMR Code as follows:

# Recoverability codes

### Application/Explanation

- Z Nonreparable item. When unserviceable, condemn and dispose of the item at the category of maintenance shown in the third position of SMR code.
- O Reparable item. When uneconomically reparable, condemn and dispose of the item at organizational or aviation unit category.
- F Reparable item. When uneconomically reparable, condemn and dispose of the item at direct support or aviation intermediate category.
- H Reparable item. When uneconomically reparable, condemn and dispose of the item at general support category.
- D Reparable item. When beyond lower category repair capability, return to depot. Condemnation and disposal of item not authorized below depot category.
- L Reparable item. Condemnation and disposal not authorized below specialized repair activity (SRA).
- A Item requires special handling or condemnation procedures because of specific reasons (e.g., precious metal content, high dollar value, critical material, or hazardous material). Refer to appropriate manuals/directives for specific instructions.
- c. FSCM (Column (3)). The Federal supply Code for Manufacturer (FSCM) is a 5-digit numeric code which is used to identify the manufacturer, distributor, or Government agency, etc., that supplies the item.
- <u>d.</u> Part Number (Column (4)). Indicates the primary number used by the manufacturer (individual, company, firm, corporation, or Government activity), which controls the design and characteristics of the item by means of its engineering drawings, specifications, standards, and inspection requirements to identify an item or range of items.

#### NOTE

When you use an NSN to requisition an item, the item you receive may have a different part number from the part ordered.

- e. <u>Description and Usable on Code (UOC) (Column (5)).</u> This column includes the following information.
- (1) The Federal item name and, when required, a minimum description to identify the item.
- (2) The statement "END OF FIGURE" appears just below the last item description in Column (5) for a given figure in both section II and section III.
- f. Oty (Column (6)). Indicates the quantity of the item used in the breakout shown on the illustration figure, which is prepared for a functional group, subfunctional group, or an assembly. A "V" appearing in this column in lieu of a quantity indicates that the quantity is variable and the quantity may vary from application to application.
- 4. Explanation of Columns (Section IV)

## a. National Stock Number (NSN) Index.

- (1) Stock number column. This column lists the NSN by National item identification number (NIIN) sequence. The NIIN consists of the last nine digits of the NSN. When using this column to locate an item, ignore the first four digits of the NSN. When requisitioning items use the complete NSN (13 digits).
- (2) <u>Fig. column.</u> This column lists the number of the figure where the item is identified/located. The illustrations are in numerical sequence in sections II and III.
- (3) <u>Item column.</u> The item number identifies the item associated with the figure listed in the adjacent Fig. column. This item is also identified by the NSN listed on the same line.
- <u>b. Part Number Index.</u> Part numbers in this index are listed by part number in ascending alphameric sequence.
- (1)  $\underline{\text{FSCM column.}}$  This column lists the Federal supply code for manufacturer (FSCM).
- (2) <u>Part number column.</u> This column indicates the part number assigned to the item.

- (3) <u>Stock number column.</u> This column lists the National stock number for the associated part number and manufacturer identified in the part number and FSCM columns to the left.
- (4) <u>Fig. column.</u> This column lists the number of the figure where the item is identified/located in sections II and III.
- (5) <u>Item column.</u> The item number is that number assigned to the item as it appears in the figure referenced in the adjacent figure number column.
  - c. Figure and Item Number Index.
- (1) <u>Fig. column.</u> This column lists the number of the figure where the item is identified/located in sections II and III.
- (2) <u>Item column.</u> The item number is that number assigned to the item as it appears in the figure referenced in the adjacent figure number column.
- (3) <u>Stock number column.</u> This column lists the National stock number for the item.
- (4) <u>FSCM column.</u> The Federal supply code for manufacturer (FSCM) is a 5-digit numeric code used to identify the manufacturer, distributor, or Government agency, etc., that supplies the item.
- (5) <u>Part number column.</u> Indicates the primary number used by the manufacturer (individual, firm, corporation, or Government activity), which controls the design and characteristics of the item by means of its engineering drawings, specifications, standards, and inspection requirements to identify an item or range of item.
- 5. Special Information
- <u>a. Associated Publications.</u> The publications listed below pertain to the AN/GRC-106A and its components:
- TM 11-5820-467-15, Antenna Group AN/GRA-50
  TM 11-5820-467-24P, Antenna Group AN/GRA-50
  TM 11-5820-520-20, Radio Sets AN/GRC-106 and AN/GRC-106A
- <u>b.</u> <u>Illustrations Listings.</u> The illustrations in this RPSTL are identical to those published in TM 11-5820-520-34P-2. Only those parts coded "C" or "O" in the third position of the SMR code are listed in the tabular listing; therefore, there may be a break in the item number sequence, figure number and page number. Only illustrations containing organizational or aviation unit authorized items appear in this RPSTL.

c. National Stock Numbers. National stock numbers (NSN'S) that are missing from P source coded items have been applied for and will be added to this TM by future change/revision when they are entered in the Army Master Data File (AMDF). Until the NSN's are established and published, submit exception requisitions to: Commander, US Army Communications- Electronics Command and Fort Monmouth, ATTN: AMSEL-LC-MM, Fort Monmouth, NJ 07703-5000 for the part required to support your equipment.

#### 6. How to Locate Repair Parts

## a. When National stock number or part number is not known.

- (1) First. Using the table of contents, determine the assembly group or subassembly group to which the item belongs. This is necessary since figures are prepared for assembly groups and subassembly groups, and listings are divided into the same groups.
- (2) <u>Second.</u> Find the figure covering the assembly group or subassembly group to which the item belongs.
- (3) <u>Third.</u> Identify the item on the figure and note the item number.
- (4) <u>Fourth.</u> Refer to the Repair Parts List for the figure to find the part number for the item number noted on the figure.
- (5)  $\underline{\text{Fifth.}}$  Refer to the Part Number Index to find the NSN, if assigned.

#### b. When National stock number or part number is known.

- (1) First. Using the index of National stock numbers and part numbers, find the pertinent National stock number or part number. The NSN index is in National item identification number (NIIN) sequence (para 4a(1)). The part numbers in the part number index are listed in ascending alphameric sequence (para 4b). Both indexes cross-reference you to the illustration figure and item number of the item you are looking for.
- (2) <u>Second.</u> After finding the figure and item number, verify that the item is the one you're looking for, then locate the item number in the repair parts list for the figure.

## 7. Abbreviations

Not applicable.

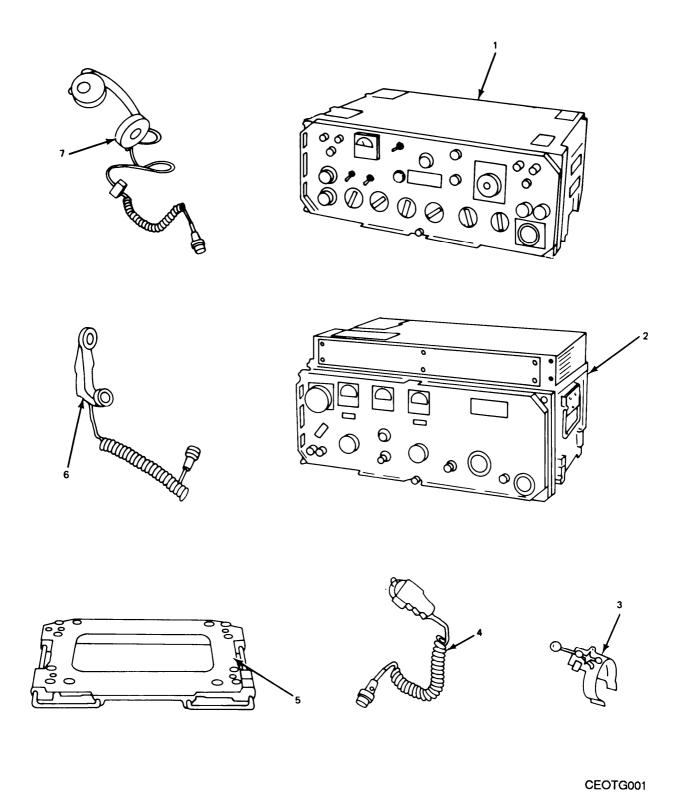


Figure 1. Radio Set AN/GRC-106A (Sheet 1 of 4).

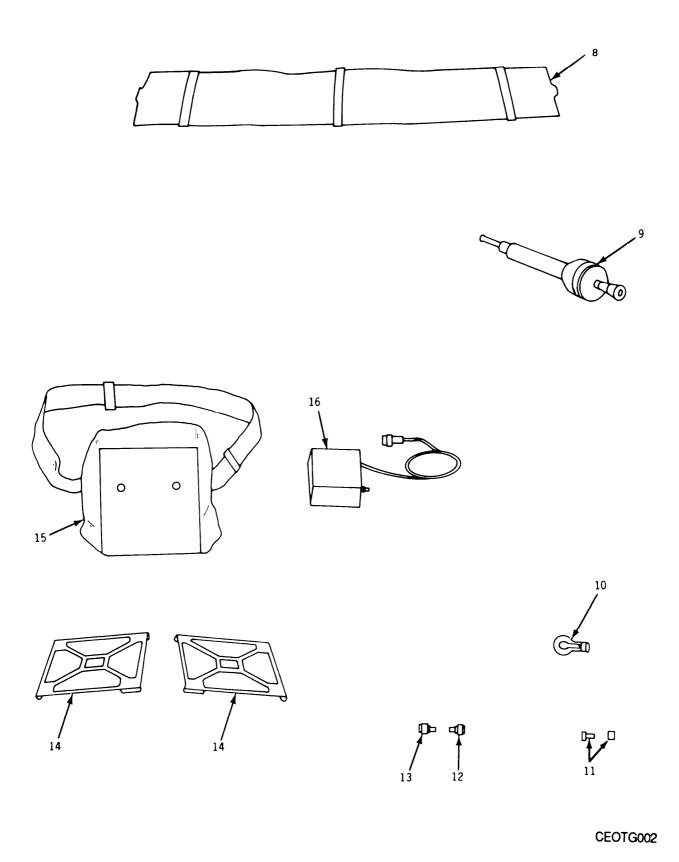


Figure 1. Radio Set AN/GRC-106A (Sheet 2 of 4).

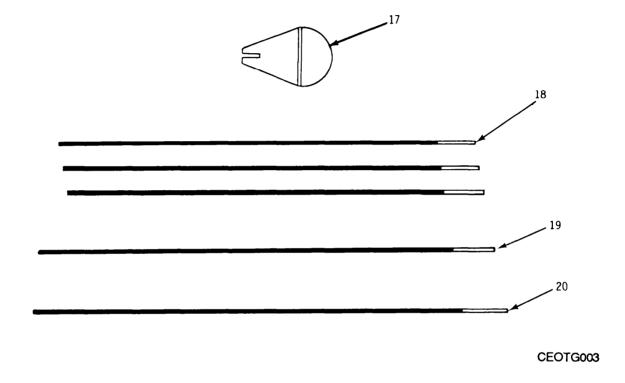


Figure 1. Radio Set AN/GRC-106A (Sheet 3 of 4).


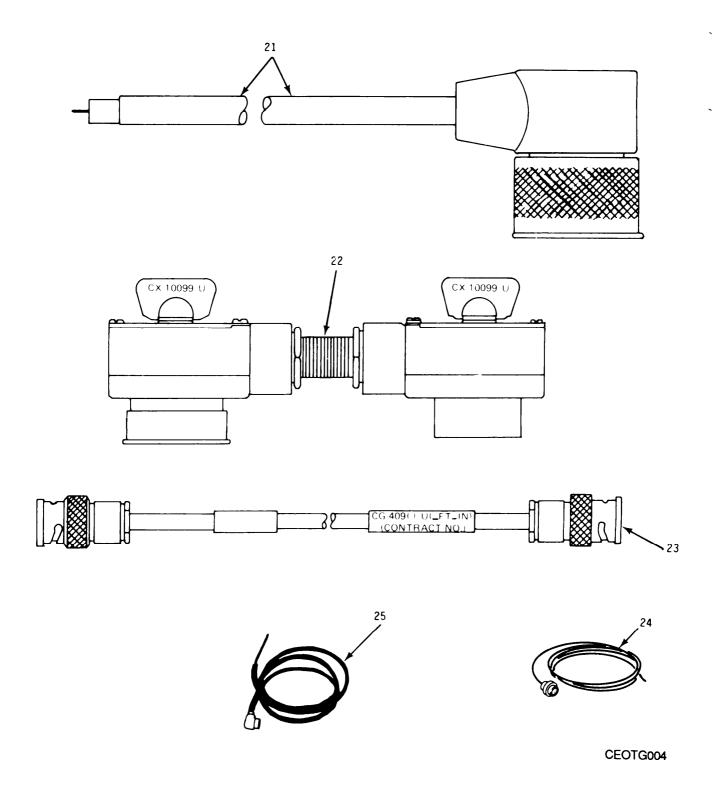


Figure 1. Radio Set AN/G RC-106A (Sheet 4 of 4).

SECTIO	ON II			TM11-5820-520-20P-2	
(1) ITEM	(2) SMR	(3)	(4) PART	(5)	(6)
NO	CODE	FSCM	NUMBER	DESCRIPTION AND USABLE ON CODE (UOC)	QTY
				GROUP 00 RADIO SET AN/GRC-106A	
				FIGURE 1	
1	PDODD	80058	RT834GRC	RECEIVER-TRANSMITE	1
2	PDODD	80058	AM-3349/GRC-106	AMPLIFIER, RADIO FRE	1
3	PAOZZ	80058	KY-116/U	KEY, TELEGRAPH	1
4	PAOZZ	97101	1418	MICROPHONE, CARBON	1
5	PAOHH	80058	MT-3140/GRC-106	MOUNTING	1
6	PAOZZ	80058	H-33/PT	HANDSET	1
7	PAOZZ	80058	H-227/U	HEADSET, ELECTRICAL	1
8	PAOZZ	80058	CW-206/GR	BAG, TEXTILE	1
9	PAOZZ	80058	AB-652/GR	BASE, MAST	1
10	PAOZZ	80063	SC-B-19491	SUPPORT, ANTENNA	1
11	PAOZZ	71002	716-1-2IN	CLAMP, ANTENNA	1
12	PAOZZ	81349	M55339-20-00201	ADAPTER, CONNECTOR	1
13	PAOZZ	81349	M55339/14-00306	ADAPTER, CONNECTOR	1
14	PAOZZ	80063	SM-D-500868	CROSSBAR ASSEMBLY	2
15	PDODD	80058	AN/GRA-50	ANTENNA GROUP FOR PARTS BREAKDOWN SEE TM 11-5820-467-24P	1
16	PAOZA	80058	LS-166/U	LOUDSPEAKER, PERMANE	1
17	PAOZZ	80063	SC-C-446046	ANTENNA TIP ASSEMBL	1
Ι,	PAOZZ	80058	MS-116A	MAST SECTION	3
	PAOZZ	80058	MS-117A	ANTENNA ELEMENT	1
	PAOZZ	80058	MS-118A	ANTENNA ELEMENT	1
	PAOZZ	80058	CX-10171/U	LEAD ELECTRICAL	1
	PAOZZ	80058	CX-10099/U	CABLE ASSEMBLY, SPEC	1
	PAOZZ	80058	CG409HU9FT	CABLE ASSEMBLY, RADI	2
	PAOZZ	80058	CX-1852/U	CABLE ASSEMBLY, POKE	1
	PAOZZ	80058	CX-10071/U	CABLE ASSEMBLY, SPEC	2

END OF FIGURE

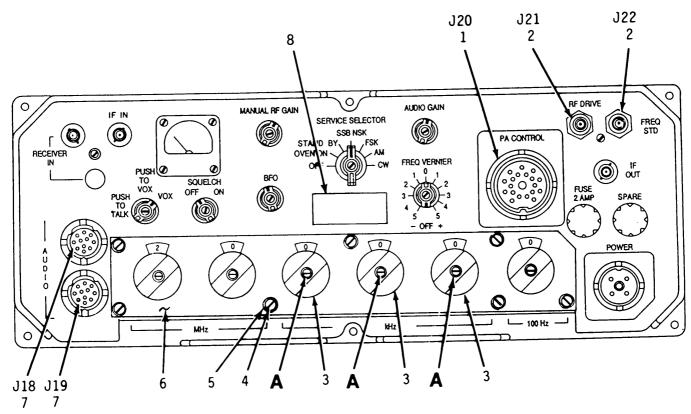

NOTE: FOR COMPLETE REFERENCE DESIGNATION PREFIX WITH 1A1 CEOTGOOG

Figure 3. Panel Chassis Assembly 1A1 (Sheet 1 of 2).


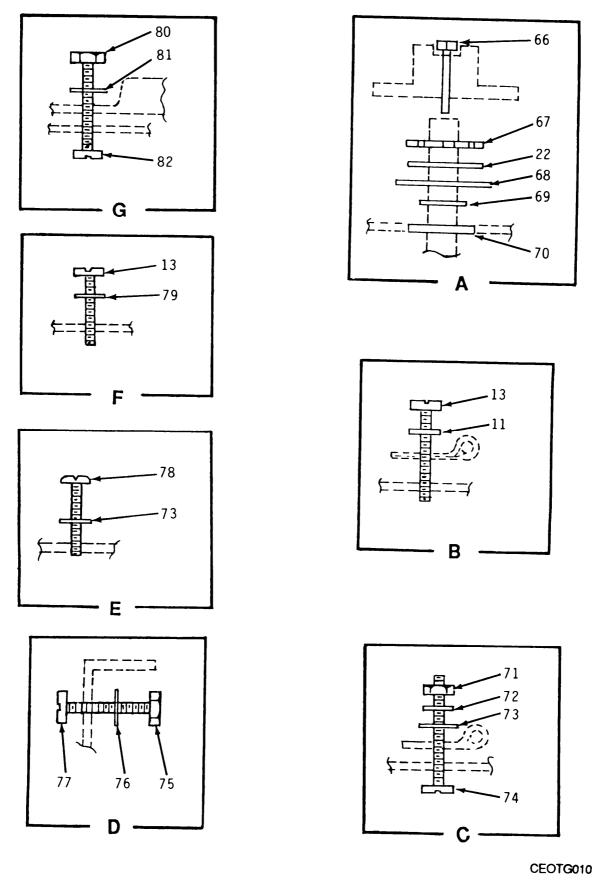


Figure 3. Panel Chassis Assembly 1A1 (Sheet 2 of 2)

SECTIO	ON II			TM11-5820-520-20P-2	
(1) ITEM	(2) SMR	(3)	(4) PART	(5)	(6)
NO	CODE	FSCM	NUMBER	DESCRIPTION AND USABLE ON CODE (UOC)	QTY
				GROUP 0101 PANEL-CHASSIS ASSEMBLY 1A1	
				FIGURE 3	
3	PAOZZ	80063	SM-D-500501	DIAL, CONTROL	3
8	MDOZZ	80063	SM-C-508648	PLATE, IDENT FOR INSTRUCTIONS SEE	1
66	PAOZZ	96906	MS21097-06001	SB11-631 SCREW,SELF-LOCKING	3

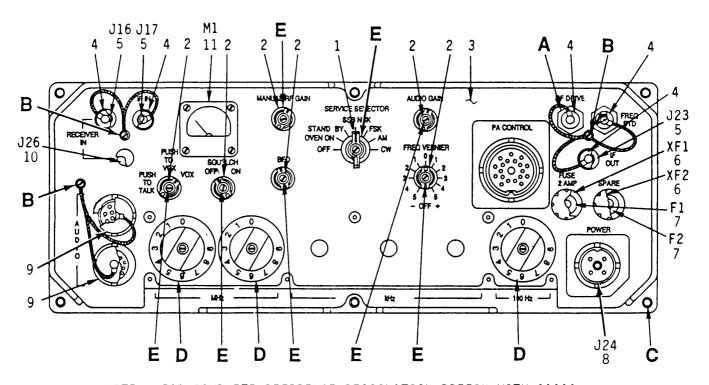

NOTE: FOR COMPLETE REFERENCE DESIGNATION PREFIX WITH 1A1A1

CEOTG011

Figure 4. Front Panel Assembly 1A1A1 (Sheet 1 of 2)

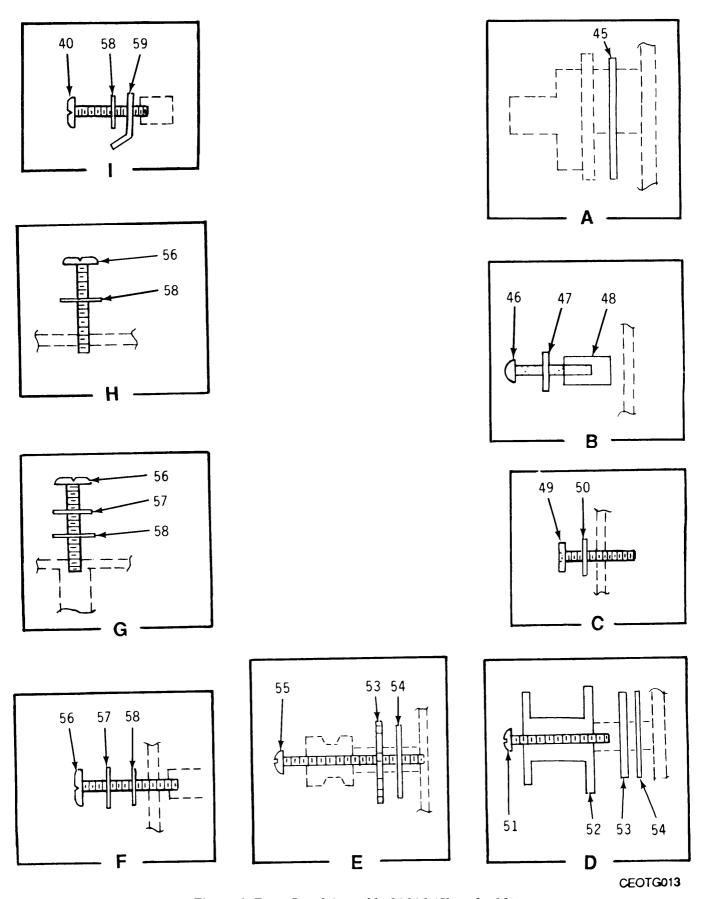


Figure 4. Front Panel Assembly 1A1A1 (Sheet 2 of 2).

SECTI	ON II			TM11-5820-520-20P-2	
(1) ITEM	(2) SMR	(3)	(4) PART	(5)	(6)
NO	CODE	FSCM	NUMBER	DESCRIPTION AND USABLE ON CODE (UOC)	QTY
				GROUP 010101 FRONT PANEL ASSEMBLY	
				1A1A1	
				FIGURE 4	
1	PAOZZ	80063	SM-C-502491	KNOB	1
2	PAOZZ	80063	SM-C-500407	KNOB	6
4	PAOZZ	80063	SM-B-502634	COVER, ELECTRICAL CO	5
7	PAOZZ	81349	F02B250V2A	FUSE, CARTRIDGE	2
9	PAOZZ	80063	SM-C-502637	COVER, ELECTRICAL CO	2
51	PAOZZ	96906	MS21097-06001	SCREW, SELF-LOCKING	3

END OF FIGURE

DIAL, CONTROL

SCREW, SELF-LOCKING


52

PAOZZ PAOZZ 80063 SM-D-500502

80063 SM-B-501079-1

3 7

4-1

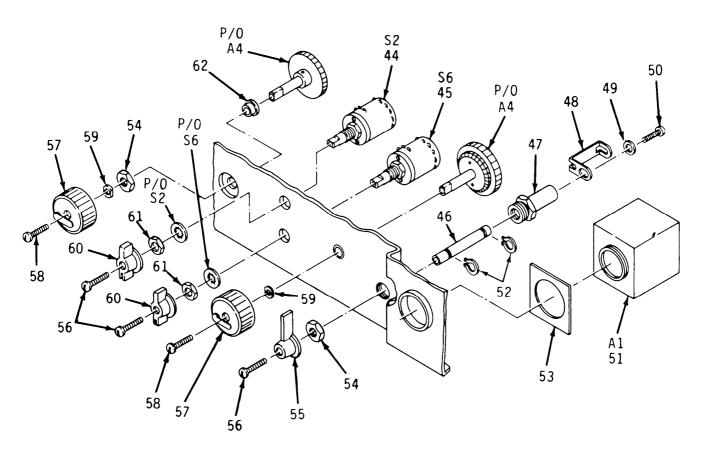

FRONT VIEW SWITCHES EXPLODED

NOTE: FOR COMPLETE REFERENCE DESIGNATION PREFIX WITH 2A1A5

CEOTG072

SECTIO	ON II			TM11-5820-520-20P-2	
(1) ITEM	(2) SMR	(3)	(4) PART	(5)	(6)
NO	CODE	FSCM	NUMBER	DESCRIPTION AND USABLE ON CODE (UOC)	QTY
				GROUP 020102 POWER AMPLIFIER PANEL 2A1A5	
				FIGURE 30	
55	PAOZZ	80063	SM-C-503203	KNOB	1
56	PAOZZ	80063	SM-B-501079-1	SCREW, SELF-LOCKING	3
57	PAOZZ	96906	MS91522-1	KNOB	2
58	PAOZZ	96906	MS21097-06001	SCREW, SELF-LOCKING	2
60	PAOZZ	80063	SM-C-502491	KNOB	2

END OF FIGURE

#### CROSS-REFERENCE INDEXES

NATIONAL STOCK NUMBER INDEX

STOCK NUMBER	FIG.	ITEM	STOCK NUMBER	FIG.	ITEM
5820-00-078-4770	1	9			
5820-00-078-4771	1	2			
5820-00-078-5614	1	5			
5985-00-115-7149	1	19			
5995-00-144-0298	1	23			
5965-00-163-9947	1	6			
5995-00-177-4501	1	24			
5985-00-199-8831	1	18			
5820-00-200-2329	1	8			
5965-00-226-2915	4	7			
5920-00-228-7882	1	7			
5985-00-238-7474	1	20			
5965-00-243-6420	1	16			
5935-00-259-0205	1	12			
5305-00-402-4662	3	66			
	4	51			
	30	58			
5935-00-469-3096	4	9			
5805-00-503-3395	1	3			
5305-00-544-6185	4	55			
	30	56			
5355-00-613-7120	30	57			
5355-00-727-8497	4	2			
5355-00-727-8500	4	52			
5355-00-727-8506	3	3			
5965-00-892-0722	1	4			
5985-00-892-0758	1	15			
5355-00-926-5270	30	55			
5985-00-930-7223	1	17			
5820-00-935-0033	1	1			
5985-00-935-8653	1	10			
5355-00-945-6596	4	1			
	30	60			
5935-00-978-4357	4	4			
5995-00-985-8005	1	22			
5995-00-985-8014	1	21			
5935-01-032-5404	1	13			
5995-01-277-7832	1	25			

#### CROSS-REFERENCE INDEXES

ATTIMEDIA	TATISTIC	

		PART NUMBER INDEX		
FSCM	PART NUMBER	STOCK NUMBER	FIG.	ITEM
80058	AB-652/GR	5820-00-078-4770	1	9
80058	AM-3349/GRC-106	5820-00-078-4771	1	2
80058	AN/GRA-50	5985-00-892-0758	1	15
80058	CG409HU9FT	5995-00-144-0298	1	23
80058	CW-206/GR	5820-00-200-2329	1	8
80058	CX-10071/U	5995-01-277-7832	1	25
80058	CX-10099/U	5995-00-985-8005	1	22
80058	CX-10171/U	5995-00-985-8014	1	21
80058	CX-1852/U	5995-00-177-4501	1	24
81349	F02B250V2A	5920-00-228-7882	4	7
80058	H-227/U	5965-00-226-2915	1	7
80058	H-33/PT	5965-00-163-9947	1	6
80058	KY-116/U	5805-00-503-3395	1	3
80058	LS-166/U	5965-00-243-6420	1	16
80058	MS-116A	5985-00-199-8831	1	18
80058	MS-117A	5985-00-115-7149	1	19
80058	MS-118A	5985-00-238-7474	1	20
96906	MS21097-06001	5305-00-402-4662	3	66
			4	51
			30	58
96906	MS91522-1	5355-00-613-7120	30	57
80058	MT-3140/GRC-106	5820-00-078-5614	1	5
81349	M55339-20-00201	5935-00-259-0205	1	12
81349	M55339/14-00306	5935-01-032-5404	1	13
80058	RT834GRC	5820-00-935-0033	1	1
80063	SC-B-19491	5985-00-935-8653	1	10
80063	SC-C-446046	5985-00-930-7223	1	17
80063	SM-B-501079-1	5305-00-544-6185	4	55
			30	56
80063	SM-B-502634	5935-00-978-4357	4	4
80063	SM-C-500407	5355-00-727-8497	4	2
80063	SM-C-502491	5355-00-945-6596	4	1
			30	60
80063	SM-C-502637	5935-00-469-3096	4	9
80063	SM-C-503203	5355-00-926-5270	30	55
80063	SM-C-508648		3	8
80063	SM-D-500501	5355-00-727-8506	3	3
80063	SM-D-500502	5355-00-727-8500	4	52
80063	SM-D-500868		1	14
97101	1418	5965-00-892-0722	1	4
71002	716-1-2IN		1	11

SECTION IV TM11-5820-520-20P-2

#### CROSS-REFERENCE INDEXES

#### FIGURE AND ITEM NUMBER INDEX

		FIGURE AND ITEM NUMBER	INDEX	
FIG.	ITEM	STOCK NUMBER	CAGEC	PART NUMBER
1	1	5820-00-935-0033	80058	RT834GRC
1	2	5820-00-078-4771	80058	AM-3349/GRC-106
1	3	5805-00-503-3395	80058	KY-116/U
1	4	5965-00-892-0722	97101	1418
1	5	5820-00-078-5614	80058	MT-3140/GRC-106
1	6	5965-00-163-9947	80058	H-33/PT
1	7	5965-00-226-2915	80058	H-227/U
1	8	5820-00-200-2329	80058	CIA1-206/GR
1	9	5820-00-078-4770	80058	AB-652/GR
1	10	5985-00-935-8653	80063	SC-B-19491
1	11		71002	716-1-2IN
1	12	5935-00-259-0205	81349	M55339-20-00201
1	13	5935-01-032-5404	81349	M55339/14-00306
1	14		80063	SM-D-500868
1	15	5985-00-892-0758	80058	AN/GRA-50
1	16	5965-00-243-6420	80058	LS-166/U
1	17	5985-00-930-7223	80063	SC-C-446046
1	18	5985-00-199-8831	80058	MS-116A
1	19	5985-00-115-7149	80058	MS-117A
1	20	5985-00-238-7474	80058	MS-118A
1	21	5995-00-985-8014	80058	CX-10171/U
1	22	5995-00-985-8005	80058	CX-10099/U
1	23	5995-00-144-0298	80058	CG409HU9FT
1	24	5995-00-177-4501	80058	CX-1852/U
1	25	5995-01-277-7832	80058	CX-10071/U
3	3	5355-00-727-8506	80063	SM-D-500501
3	8		80063	SM-C-508648
3	66	5305-00-402-4662	96906	MS21097-06001
4	1	5355-00-945-6596	80063	SM-C-502491
4	2	5355-00-727-8497	80063	SM-C-500407
4	4	5935-00-978-4357	80063	SM-B-502634
4	7	5920-00-228-7882	81349	F02B250V2A
4	9	5935-00-469-3096	80063	SM-C-502637
4	51	5305-00-402-4662	96906	MS21097-06001
4	52	5355-00-727-8500	80063	SM-D-500502
4	55	5305-00-544-6185	80063	SM-B-501079-1
30	55	5355-00-926-5270	80063	SM-C-503203
30	56	5305-00-544-6185	80063	SM-B-501079-1
30	57	5355-00-613-7120	96906	MS91522-1
30	58	5305-00-402-4662	96906	MS21097-06001
30	60	5355-00-945-6596	80063	SM-C-502491

# RECOMMENDED CHANGES TO EQUIPMENT TECHNICAL PUBLICATIONS



# SOMETHING WRONG

# WITH THIS PUBLICATION?

THEN. JOT DOWN THE DOPE ABOUT IT ON THIS FORM, CAREFULLY TEAR IT OUT, FOLD IT AND DROP IT IN THE MAIL:

(PRINT YOUR UNIT'S COMPLETE ADDRESS) FROM Commander

Stateside Army Depot ATTN: AMSTA-US Stateside, N.J. 0770 07703-5007

DATE SENT

10 July 1975

**PUBLICATION NUMBER** 

PUBLICATION DATE

PUBLICATION TITLE

TM 11-5840-340-20P

23 Jan 78

Radar Set AN/PRC-76

TN	1 11-58	340-340	1-20P		23 Jan 78	Radar Set AN/PRC-/6			
BE EXACT PIN-POINT WHERE IT IS		IN THIS	S SPACE TELL WHAT IS	SWRONG					
PAGE NO	PARA- GRAPH	FIGURE NO	TABLE		HAT SHOULD BE DON				
33	GRAFA	1.0	140	For i	tem 2 change th	ne NSN to read: 5835-00-134-9186.			
33				Reaso		ie Now to read. Book to 10. Pro-			
					Reason. Accuracy.				
44		19		Ident	ify the cover or	the junction box (item no. 5).			
				Reaso	$\frac{n}{n}$ : It is a separance on figure 19.	rate item and s not called out			
		'			on figure 19.				
45						junction box as an item in the			
					ng for figure 19				
				Reaso	<u>n</u> : Same as abov	ve Vi			
			ļ			•			
			1	ļ					
				Ì					
				k					
			-						
				İ					
		•							
		i							
		ŀ							
1			1						
1		1							
			1						
1									

PRINTED NAME GRADE OR TITLE AND TELEPHONE NUMBER SSG I. M. DeSpirit of

999-1776

DA 1 JUL 79 2028-2

PREVIOUS EDITIONS ARE OBSOLETE.

PS -- IF YOUR OUTFIT WANTS TO KNOW ABOUT YOUR RECOMMENDATION MAKE A CARBON COPY OF THIS AND GIVE IT TO YOUR HEADQUARTERS

	FILL IN YOUR UNIT'S ADDRESS	1
•	<del>\ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ </del>	•

TEAR ALONG PERFORATED LIME

DEPARTMENT OF THE ARMY

SAMPLE

Commander

US Army Communications-Electronics Command and Fort Monmouth

ATTN: AMSEL-LC-ME-PS

Fort Monmouth, New Jersey 07703-5000

## RECOMMENDED CHANGES TO EQUIPMENT TECHNICAL PUBLICATIONS

SOMETHING WEDDS WITH THIS PUBLICATION?								
	THENJOT DOWN THE DOPE ABOUT IT ON THIS FORM. CAREFULLY TEAR IT OUT, FOLD IT AND DROP IT IN THE MAIL.							
PUBLICATIO	PUBLICATION NUMBER PUBLICATION DATE PUBLICATION TITLE							
	·5820-52		2		1 August 1		Radio Set AN/GRC-106A	
BE EXACT					L			
PAGE	PARA FI	GURE	TABLE	ľ	SPACE TELL WHA			
					<del></del>			
PRINTED NAME GRADE OR TITLE AND TELEPHONE NUMBER						SIGN HE	RE	

DA : 5084 2028-2

PREVIOUS EDITIONS
ARE OBSOLETE

P.S.—IF YOUR OUTFIT WANTS TO KNOW ABOUT YOUR RECOMMENDATION MAKE A CARBON COPY OF THIS AND GIVE IT TO YOUR HEADQUARTERS.

FILL IN YOUR UNIT'S ADDRESS		
	FOLD BACK	
DEPARTMENT OF THE AR	мy	
	<del></del>	
OFFICIAL BURENESS		1

Commander
US Army Communications-Electronics Command
and Fort Monmouth
ATTN: AMSEL-LC-ME-PS
Fort Monmouth, New Jersey 07703-5000

# RECOMMENDED CHANGES TO EQUIPMENT TECHNICAL PUBLICATIONS

SOMETHING WEDDE WITH THIS PUBLICATION?							
		)	THEX:	IOT D	OWN THE	FROM	(PRINT YOUR UNIT'S COMPLETE ADDRESS)
7	-1/0	1 1	DOPE A	BOUT I	T ON THIS		
	V				LLY TEAR		
/					D IT AND E MAIL.	DATE	SENT
PUBLICATION NUMBER PUBLICATION TITLE							PUBLICATION TITLE
TM	11-582	20-520-	20P-2		l August 1	989_	Radio Set AN/GRC-106A
BE EXA		OINT WHE		IN THIS	SPACE TELL WHA		
PAGE NO	PARA: GRAPH	FIGURE NO	TABLE NO		HAT SHOULD BE		
		•					!
		ĺ					
		ł					
		ł					
		Ì					
		ł		l			
							•
				ļ !			
		ļ					
				1			
PRINTED NAME GRADE OR TITLE AND TELEPHONE NUMBER						SIGN H	ERE
1							

DA . 50RM 2028-2

PREVIOUS EDITIONS
ARE OBSOLETE

P.S.-IF YOUR OUTFIT WANTS TO KNOW ABOUT YOUR RECOMMENDATION MAKE A CARBON COPY OF THIS AND GIVE IT TO YOUR HEADQUARTERS

FILL IN YOUR UNIT'S ADDRESS	FOLD BACK	
DEPARTMENT OF THE ARI	 MY	

Commander
US Army Communications-Electronics Command
and Fort Monmouth
ATTN: AMSEL-LC-ME-PS
Fort Monmouth, New Jersey 07703-5000

#### RECOMMENDED CHANGES TO FOUIPMENT TECHNICAL PUBLICATIONS

RECOMMENDED CHANGES TO EQUIPMENT TECHNICAL PUBLICATIONS							
7:1	SOMETHING WEDDE WITH THIS PUBLICATION?						
DOPE AL	FROM (PRINT YOUR UNIT'S COMPLETE ADDRESS)  FROM (PRINT YOUR UNIT'S COMPLETE ADDRESS)  FOLD IT AND						
	IN THE MAIL.  DATE SENT						
PUBLICATION NUMBER	PUBLICATION DATE PUBLICATION TITLE						
TM 11-5820-520-20P-2  BE EXACT PIN POINT WHERE IT IS	1 August 1989 Radio Set AN/GRC-106A						
PAGE PARA FIGURE TABLE NO GRAPH NO NO	N THIS SPACE TELL WHAT IS WRONG AND WHAT SHOULD BE DONE ABOUT IT:						
NO GRAFA NO							
<b>!</b>							
<b>!</b>							
1							
	ir P						

SIGN HERE

DA , FORM 2028-2

PRINTED NAME GRADE OR TITLE AND TELEPHONE NUMBER

PREVIOUS EDITIONS ARE OBSOLETE

 $P.S. \\ \cdots IF$  YOUR OUTFIT WANTS TO KNOW ABOUT YOUR RECOMMENDATION MAKE A CARBON COPY OF THIS AND GIVE IT TO YOUR HEADQUARTERS

FILL IN YOUR UNIT'S ADDRESS

FOLD BACK

TEAR ALONG PERFORATED LINE

### DEPARTMENT OF THE ARMY

OFFICIAL BUSINESS

Commander
US Army Communications-Electronics Command
and Fort Monmouth
ATTN: AMSEL-LC-ME-PS

Fort Monmouth, New Jersey 07703-5000

By Order of the Secretary of the Army:

CARL E. VUONO General, United States Army Chief of Staff

Official:

## WIILLIAM J. MEEHAN II Brigadier General, United States Army The Adjutant General

DI STRI BUTI ON:

To be distributed in accordance with DA Form 12-51 unit requirements for AN/GRC-106A.

☆ U.S. GOVERNMENT PRINTING OFFICE: 1993 O - 342-421 (62227)

PIN: 033849-000