**TECHNICAL MANUAL** 

## ORGANIZATIONAL MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LISTS

FOR

# SWITCHBOARDS, TELEPHONE, MANUAL SB-22/PT (NSN 5805-00-257-3602) AND SB-22A/PT (NSN 5805-00-715-6171)

HEADQUARTERS, DEPARTMENT OF THE ARMY

**MAY 1978** 

TECHNICAL MANUAL

No. 11-5805-262-20P

HEADQUARTERS DEPARTMENT OF THE ARMY WASHINGTON, DC, 22 May 1978

#### ORGANIZATIONAL MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LISTS

#### FOR

#### SWITCHBOARDS, TELEPHONE, MANUAL

#### SB-22/PT (NSN 5805-00-257-3602)

#### AND

#### SB-22A/PT (NSN 5805-00-715-6171)

Current as of 17 November 1977

#### REPORTING OF ERRORS

You can improve this manual by recommending improvements using DA Form 2028-2 (Test) located in the back of the manual. Simply tear out the self-addressed form, fill it out as shown on the sample, fold it where shown, and drop it in the mail.

If there are no blank DA Forms 2028-2 (Test) in the back of your manual, use the standard DA Form 2028 (Recommended Changes to Publications and Blank Forms) and forward to the Commander, US Army Communications and Electronics Materiel Readiness Command, ATTN: DRSEL-MA-Q, Fort Monmouth, NJ 07703.

In either case, a reply will be furnished direct to you.

#### TABLE OF CONTENTS

				Figure
SECTION	ν Ι.	Introduction	1	
	II.	Repair parts list	5	
Group	00	Switchboards, Telephone, Manual SB-22/PT and SB-22A/PT	5	1,2
	01	Telephone Circuit, Operators TA-221/PT	9	3
	02	Telephone Circuit, Line Jack TA-222/PT	11	4
	03	Handset-Headset H-14( )/U (See TM 11-5965-206-14P for parts)		
	04	Accessory Kit MX-2915/PT (A Model only)	13	6
		0401 Telephone Circuit, Line Jack TA-222/PT (Same as group 02)		
		0402 Telephone Circuit, Trunk Jack TA-326/PT	15	6
	05	Accessory Kit MX-230/PT and MX-230A/PT (Plain Model only)	19	7
		0501 Telephone Circuit, Line Jack TA-222/PT (Same as group 02)		
SECTION	III.	Special tools list (Not applicable)		
	IV.	National stock number and part number index	20	

Illus

<sup>\*</sup> This manual supersedes TM 11-5805-262-20P, 1 December 1971.

Code

#### 1. Scope

This manual lists spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE), and other special support equipment required for performance of organizational maintenance of the SB-22/PT and SB-22A/PT. It authorizes the requisitioning and issue of spares and repair parts as indicated by the source and maintenance codes.

#### 2. General

This Repair Parts and Special Tools List is divided into the following sections:

a. Section II—Repair Parts List. A list of spares and repair parts authorized for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in numeric sequence, with the parts in each group listed in figure and item number sequence.

b. Section III.-Special Tools List. Not applicable.

c. Section IV.-National Stock Number and Part Number Index. A list, in National item identification number (NIIN) sequence, of all National stock numbers (NSN) appearing in the listings, followed by a list, in alphameric sequence, of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration figure and item number appearance.

#### 3. Explanation of Columns

a. Illustration. This column is divided as follows:

(1) *Figure number.* Indicates the figure number of the illustration on which the item is shown.

(2) *Item number.* The number used to identify item called out in the illustration.

b. Source, Maintenance, and Recoverability (SMR) Codes.

(1) *Source code.* Source codes indicate the manner of acquiring support items for maintenance, repair, or overhaul of end items. Source

codes are entered in the first and second positions of the Uniform SMR Code format as follows:

PA-Item procured and stocked for anticipated or known usage.

Definition

#### NOTE

Cannibalization or salvage may be used as a source of supply for any items source coded above except those coded XA and aircraft support items as restricted by AR 700-42.

(2) Maintenance code. Maintenance codes are assigned to indicate the levels of maintenance authorized to USE and REPAIR support items. The maintenance codes are entered in the third and fourth positions of the Uniform SMR Code format as follows:

(a) The maintenance code entered in the third position will indicate the lowest maintenance level authorized to remove, replace, and use the support item. The maintenance code entered in the third position will indicate the following levels of maintenance:

#### Application/Explanation

C-Crew or operator maintenance performed within organizational maintenance.

O-Support item is removed, replaced, used at the organizational level.

(b) The maintenance code entered in the fourth position indicates. whether the item is to be repaired and identifies the lowest maintenance level with the capability to perform complete repair (i.e., all authorized maintenance functions). This position will contain one of the following maintenance codes:

#### Code

Code

Application/Explanation

F-The lowest maintenance level capable of complete repair of the support item is the direct support level.

Z-Nonreparable. No repair is authorized.

(3) Recoverability code. Recoverability codes are assigned to support items to indicate the disposition action on unserviceable items. The re-

coverability code is entered in the fifth position of the Uniform SMR Code format as follows:

Recoverability

Codes

#### Definition

- Z-Nonreparable item. When unserviceable, condemn and dispose at the level indicated in position 3.
- F-Reparable item. When uneconomically reparable, condemn and dispose at the direct support level.

*c.* National Stock Number. Indicates the National stock number assigned to the item and will be used for requisitioning purposes.

*d.* Part Number. Indicates the primary number used by the manufacturer (individual, company, firm, corporation, or Government activity), which controls the design and characteristics of the item by means of its engineering drawings, specifications, standards, and inspection requirements, to identify an item or range of items.

#### NOTE

When a stock-numbered item is requisitioned, the repair part received may have a different part number than the part being replaced.

*e.* Federal Supply Code for Manufacturer (FSCM). The FSCM is a 5-digit numeric code listed in SB 708-42 which is used to identify the manufacturer, distributor, or Government agency, etc.

*f. Description.* Indicates the Federal item name and, if required, a minimum description to identify the item.

g. Unit of Measure (U/M). Indicates the standard of the basic quantity of the listed item as used in performing the actual maintenance function. This measure is expressed by a two-character alphabetical abbreviation (e.g., ea, in, pr, etc). When the unit of measure differs from the unit of issue, the lowest unit of issue that will satisfy the required units of measure will be requisitioned.

*h. Quantity Incorporated in Unit.* Indicates the quantity of the item used in the breakout shown on the illustration figure, which is prepared for a functional group, subfunctional group, or an assembly.

#### 4. Special Information

*a.* Usable on codes are shown in the description column. Uncoded items are applicable to all models. Identification of the usable on codes used in this publication are:

Code	Used on
512	SB-22/PT
ABK	SB-22A/PT

*b.* The folowing publications pertain to the the SB-22/PT, SB-22A/PT and its components:

- TM 11-5805-262-12, Switchboards, Telephone, Manual SB-22/PT and SB-22A/PT
- TM 11-5965-206-14P, Headset-Microphone H-91A/U; Handset-Headset H-144/U, H-144A/ U, H-144B/U, and H-144C/U; and Headset-Microphone H-210/G

*c.* The illustrations in this manual are identical to those published in TM 11-5805-262-34P. Only those parts assigned the third position SMR maintenance code "C" or "O" are listed in the tabular listing; therefore, there may be a break in the item number sequence. Only illustrations containing organizational authorized items appear in this manual.

#### 5. How to Locate Repair Parts

*a.* When National stock number or part number is unknown:

(1) *First.* Using the table of contents, determine the functional group within which the item belongs. This is necessary since illustrations are prepared for functional groups and listings are divided into the same groups.

(2) *Second.* Find the illustration covering the functional group to which the item belongs.

(3) *Third.* Identify the item on the illustration and note the illustration figure and item number of the item.

(4) *Fourth.* Using the Repair Parts Listing, find the figure and item number noted on the illustration.

b. When National stock number or part number is known.


(1) *First.* Using the Index of National Stock Numbers and Part Numbers, find the pertinent National stock number or part number. This index is in NIIN sequence, followed by a list of part numbers in alphameric sequence, cross-referenced to the illustration figure number and item number.

(2) Second. After finding the figure and item

number, locate the figure and item number in the repair parts list.

#### 6. Abbreviations

(Not applicable.)

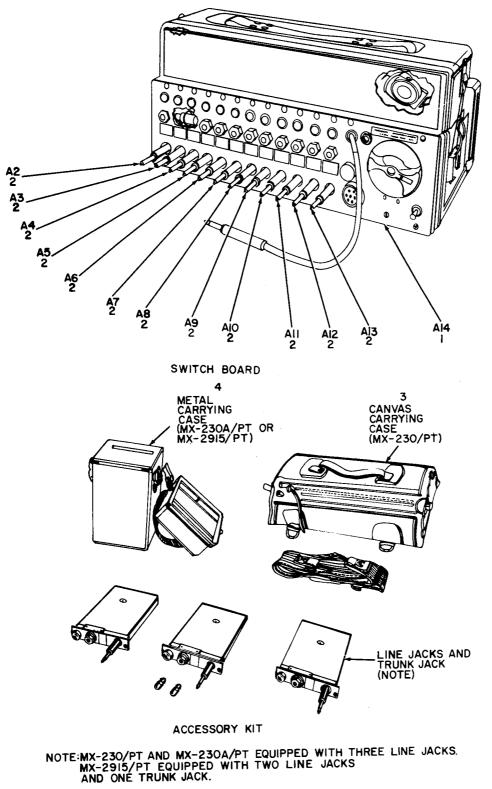

EL4GEOOI

Figure 1. Switchboards, Telephone, Manual SB-22/PT and SB-22A/PT.

#### TM11-5805-262-20P

SECTIO	ON II								
(1)		(2)	(3)	(4)	(5)	(6)		(7)	(8)
ILLUST	FRATION								QTY
(a)	(b)		NATIONAL			DESCRIPTION			INC
FIG	ITEM	SMR	STOCK	PART					IN
NO.	NO.	CODE	NUMBER	NUMBER	FSCM		USABLE ON CODE	U∖M	UNIT
						GROUP 00 SWITCHBOARDS, TELEPHONE, MANUAL			
						SB-22/PT AND SB-22A/PT			
1	1	PACFF	5805-00-503-3341	TA221PT	80058	TELEPHONE CIRCUIT, OPR		EA	1
1	2	PACFF	5805-00-503-3337	TA222PT	80058	TELEPHONE CIRCUIT,L JK		EA	12
1	3	PACFF	5805-00-356-2693	MY220DT	80058	SWITCHBOARD ACCESSORY KIT	512	EA	1
T	2	PACFF	5805-00-550-2095	MAZSUPI	00000	SWITCHBOARD ACCESSORI KII	512	LA	T
1	4	PACFF	5805-00-356-2693	MX230APT	80058	SWITCHBOARD ACCESSORY KIT	512	EA	1
1	4	PACFF	5805-00-715-6170	MX2915PT	80058	SWITCHBOARD ACCESSORY KIT	ABK	EA	1



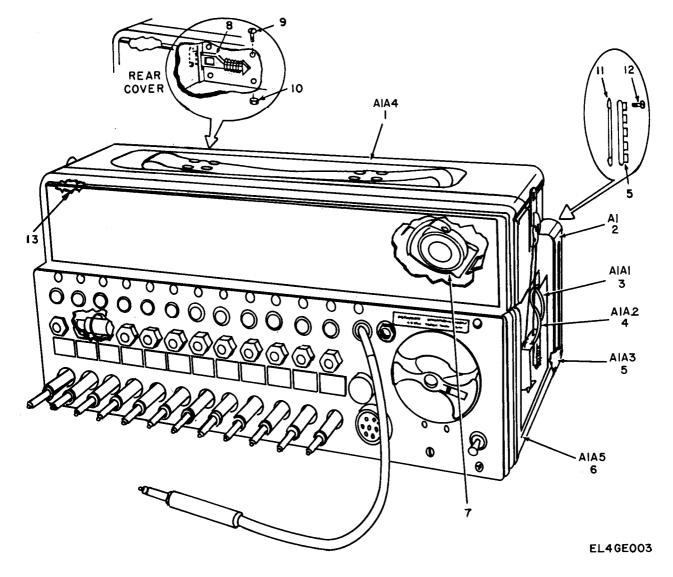


Figure 2. Switchboards, Telephone, Manual SB-22/PT and SB-22A/PT, Front Panel View.

#### TM11-5805-262-20P

 SECTION	I II								
(1)		(2)	(3)	(4)	(5)	(6)		(7)	(8)
ILLUSTE	RATION								QTY
(a)	(b)		NATIONAL			DESCRIPTION			INC
FIG	ITEM	SMR	STOCK	PART					IN
NO.	NO.	CODE	NUMBER	NUMBER	FSCM		USABLE ON CODE	U∖M	UNIT
2	б	PAOZZ	6135-00-635-5223	SCB84406	80063	CASE ASSEMBLY		EA	1
2	7	PACFF	5965-00-682-2769	H144U	80058	HANDSET-HEADSET,H-144/U		EA	1

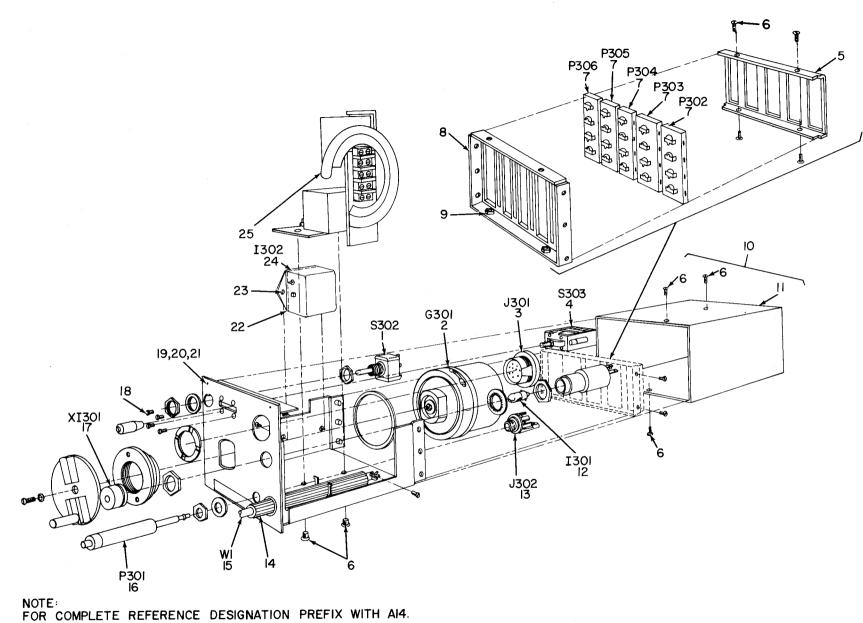




EL4GE004

#### TM11-5805-262-20P

SECTIO	ON II							
(1)		(2)	(3)	(4)	(5)	(6)	(7	) (8)
ILLUST	TRATION							QTY
(a)	(b)		NATIONAL			DESCRIPTION		INC
FIG	ITEM	SMR	STOCK	PART				IN
NO.	NO.	CODE	NUMBER	NUMBER	FSCM	USABLE ON C	DDE U\	M UNIT
						GROUP 01 TELEPHONE CIRCUIT, OPERATORS TA-221/PT		
3	12	PAOZZ	6240-00-196-4501	1490	24446	LAMP, INCANDESCENT	EA	1
3	17	PAOZZ	6210-00-584-0202	TCS61594-81XP10	72619	LIGHT, INDICATOR	EA	1

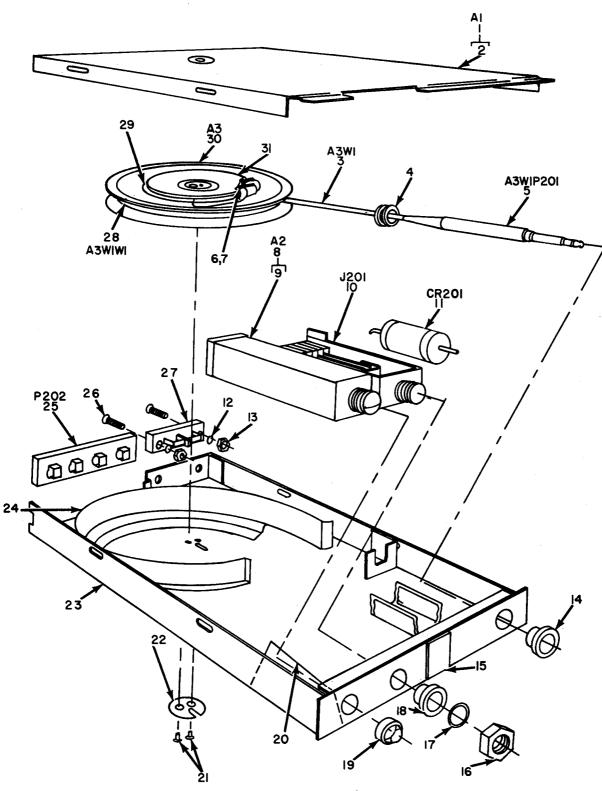


NOTE: FOR COMPLETE REFERENCE DESIGNATION PREFIX WITH A2 THRU A13, A15A2, A15A3

EL4GE006

Figure 4. Telephone Circuit, Line Jack TA-222/PT.

#### TM11-5805-262-20P

SECTIO	I II								
(1)		(2)	(3)	(4)	(5)	(6)		(7)	(8)
ILLUST	RATION								QTY
(a)	(b)		NATIONAL			DESCRIPTION			INC
FIG	ITEM	SMR	STOCK	PART					IN
NO.	NO.	CODE	NUMBER	NUMBER	FSCM		USABLE ON CODE	U∖M	UNIT
						GROUP 02 TELEPHONE CIRCUIT,LINE JACK, TA-222/PT			
4	15	PAOZZ	9905-00-639-1679	SCB84438	80063	STRIP DESIGNATION		EA	1
4	19	PAOZZ	6210-00-284-0389	SCB84440	80063	WINDOW ASSEMBLY		EA	1

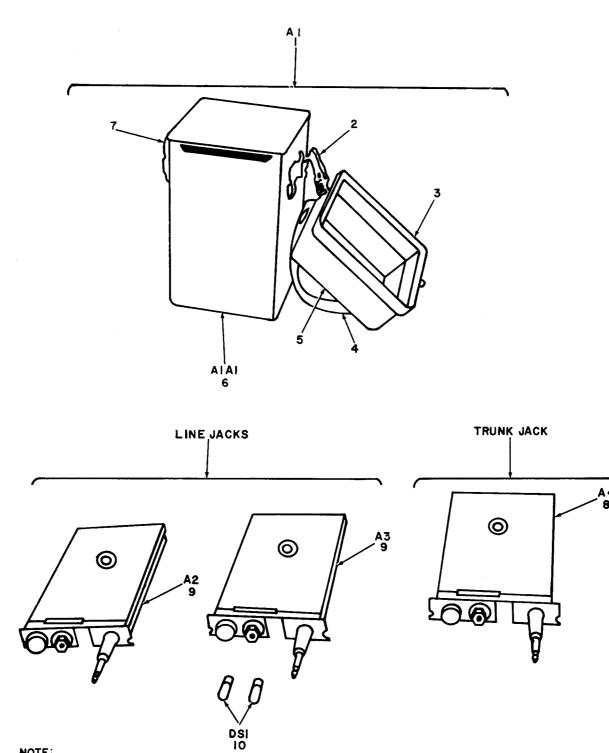


NOTE: FOR COMPLETE REFERENCE DESIGNATION PREFIX WITH AIS

#### EL4GE007

Figure 5. Accessory Kit, MX-2915/PT, A Model Only.

						TM11-5805-262-20P			
SECTI	ON II								
(1)		(2)	(3)	(4)	(5)	(6)		(7)	(8)
ILLUS	TRATION								QTY
(a)	(b)		NATIONAL			DESCRIPTION			INC
FIG	ITEM	SMR	STOCK	PART					IN
NO.	NO.	CODE	NUMBER	NUMBER	FSCM		USABLE ON CODE	U/M	UNIT
						GROUP 04 ACCESSORY KIT MX-2915/PT (A MODEL ONLY)			
5	6	PACFF	5805-00-799-3225	SCD142211	80063	CASE ASSEMBLY	ABK	EA	1
-	0		FOOF 00 515 6155		00050				-
5	8	PACFF	5805-00-715-6175	TA326PT	80058	TRUNK JACK	ABK	EA	1
5	9	PACFF	5805-00-503-3337	ma 2 2 2 Dm	80058	TELEPHONE CIRCUIT L JK	ABK	EA	2
5	9	PACFF	5805-00-505-5557	IAZZZPI	00050	TELEPHONE CIRCUIT L DK	ABL	EA	2
5	10	PAOZZ	6240-00-196-4501	1490	24446	LAMP, INCANDESCENT	ABK	EA	2
5	10	1 1022	0210 00-190-4901	1100	21110	DEFIT / INCHADEOCENT	hbit	ыn	2

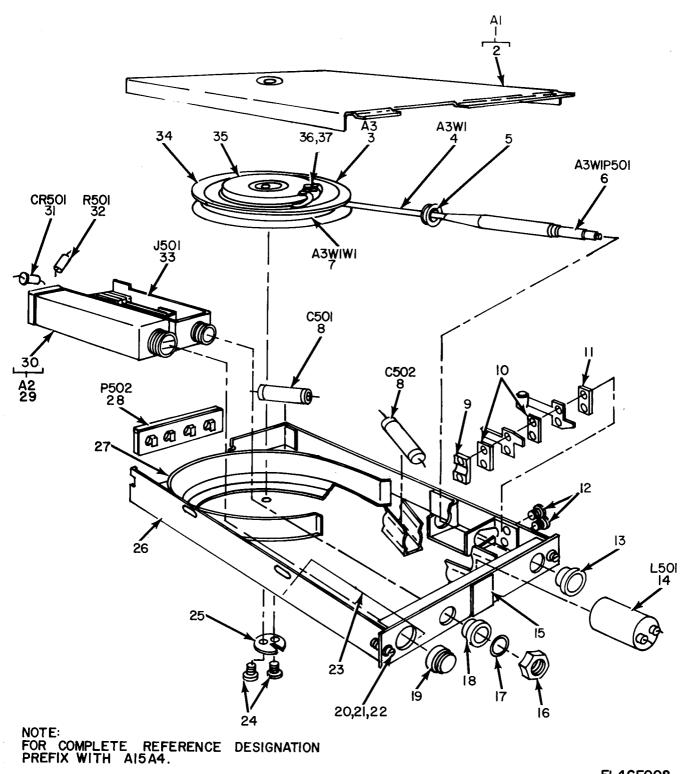

#### EL4GE008



#### TM11-5805-262-20P

SECTION	II N								
(1)		(2)	(3)	(4)	(5)	(6)		(7)	(8)
ILLUSTE	RATION								QTY
(a)	(b)		NATIONAL			DESCRIPTION			INC
FIG	ITEM	SMR	STOCK	PART					IN
NO.	NO.	CODE	NUMBER	NUMBER	FSCM		USABLE ON CODE	U∖M	UNIT
						GROUP 0402 TELEPHONE CIRCUIT, TRUNK JACK TA-326/PT			
6	19	PAOZZ	6210-00-284-0389	SCB84440	80063	WINDOW ASSEMBLY	ABK	EA	1

15/(16 BLANK)

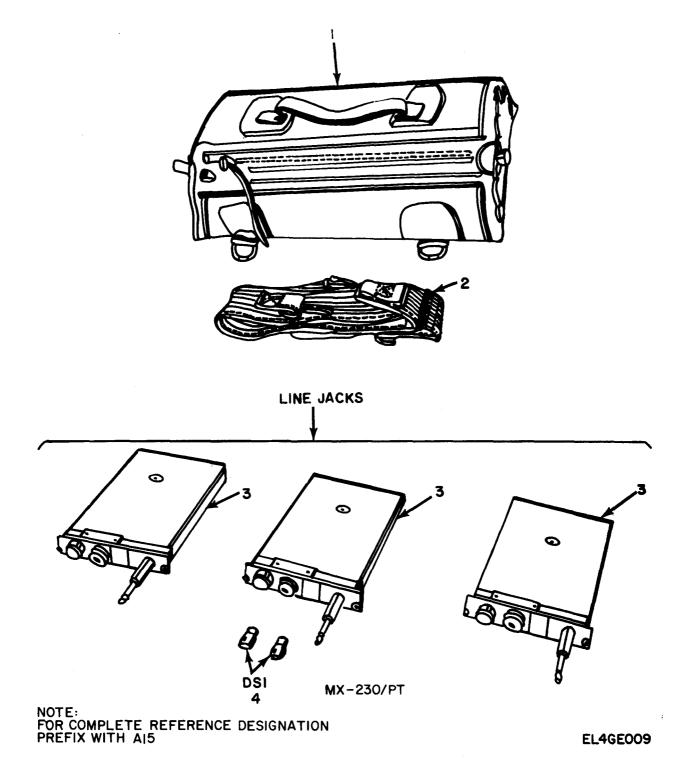
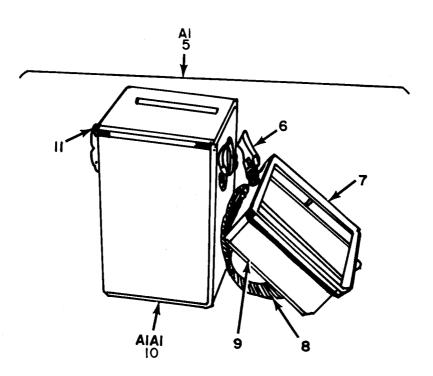


Figure 7. Accessory Kit, MX-230/PT and MX-230A/PT (Sheet 1 of 2).



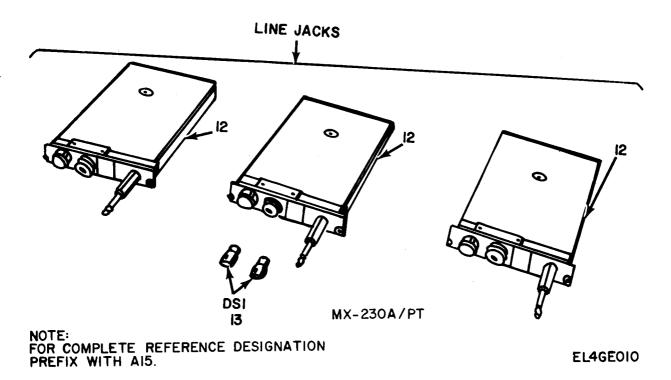


Figure 7. Accessory Kit, MX-230/PT and MX-230A/PT (Sheet 2 of 2).

						TM11-5805-262-20P			
SECTI	ON II								
(1)		(2)	(3)	(4)	(5)	(6)		(7)	(8)
ILLUS	TRATION								QTY
(a)	(b)		NATIONAL			DESCRIPTION			INC
FIG	ITEM	SMR	STOCK	PART					IN
NO.	NO.	CODE	NUMBER	NUMBER	FSCM		USABLE ON CODE	U∖M	UNIT
						GROUP 05 ACCESSORY KIT MX-230/PT AND MX-230A/PT			
						(PLAIN MODEL ONLY)			
7	1	PACFF	5805-00-392-8058	BA31062	28528	CASE, CANVAS	512	EA	1
_									
7	2	PACFF	5805-00-313-3548	SCD147777-3	80063	SLING, CARRYING	512	EA	1
-	2		F00F 00 F00 000F		00050		5.7.0		2
7	3	PACFF	5805-00-503-3337	TAZZZPT	80058	TELEPHONE CIRCUIT L JK	512	EA	3
7	4	PAOZZ	6245-00-196-4501	1400	24446	LAMP, INCANDESCENT	512	EA	2
/	4	PAOZZ	0245-00-190-4501	1490	24440	LAMP, INCANDESCENI	512	LA	2
7	10	PACFF	5805-00-799-3225	SCD142211	80063	CASE ASSEMBLY	512	EA	1
/	10	PACPP	5005-00-755-5225	5CD142211	00003	CADE ADDENDIT	J12	EA	1
7	12	PACFF	5805-00-503-3337	ТА222РТ	80058	TELEPHONE CIRCUIT L JK	512	EA	3
,	12	111011	5005 00 505 555,		00000		512	2	5
7	13	PAOZZ	6240-00-196-4501	1490	24446	LAMP, INCANDESCENT	512	EA	2
									-

#### NATIONAL STOCK NUMBER AND PART NUMBER INDEX NOTE: LATEST NATIONAL STOCK NUMBER AND PART NUMBER ASSINGMENTS ARE INCLUDED AT END OF INDEX

	FIG.	ITEM		FIG.	ITEM		
STOCK NUMBER	NO.	NO.	STOCK NUMBER	NO.	NO.		
6240-00-196-4501	3	12	5805-00-503-3337	1	2		
6240-00-196-4501	5	10	5805-00-503-3337	5	9		
6245-00-196-4501	7	4	5805-00-503-3337	7	3		
6240-00-196-4501	7	13	5805-00-503-3337	7	12		
6210-00-284-0389	4	19	5805-00-503-3341	1	1		
6210-00-284-0389	6	19	6135-00-635-5223	2	6		
5805-00-356-2693	1	3	5805-00-715-6175	5	8		
5805-00-356-2693	1	4					
PART		FIG.	ITEM	PART		FIG.	ITEM
NUMBER	FSCM	NO.	NO.	NUMBER	FSCM	NO.	NO.
H144U	80058	2	7				
				TA221PT	80058	1	1
MX230APT	80058	1	4	TA222PT	80058	1	2
MX230PT	80058	1	3	TA222PT	80058	5	9
SCB84406	80063	2	6	TA326PT	80058	5	8
SCB84440	80063	4	19	1490	24446	3	12
SCB84440	80063	6	9	1490	24446	5	10
SCD142211	80063	5	6	1490	24446	7	4
SCD142211	80063	7	10	1490	24446	7	13
	LATEST NAT	FIONAL S	TOCK NUMBER ASSIGNMENTS				
	FIG.	ITEM					
STOCK NUMBER	NO.	NO.					
		_					
5965-00-519-9366	2	7					
5965-00-682-2769	2	7					
5805-00-715-6170	1	4					
	LATEST PAR	RT NUMBE	R ASSIGNMENTS				
PART		FIG.	ITEM				
NUMBER	FSCM	NO.	NO.				
Horiblin	10011						
MX2915PT	80058	1	4				
TA222PT	80058	7	3				
TA222PT	80058	7	12				
	ADDITIONAL	LATEST	NATIONAL STOCK NUMBER A	SSIGNMENTS			
	FIGURE	ITEM					
STOCK NUMBER	NO.	NO.					
	7	2					
5805-00-313-3548	7	2					
5805-00-392-8058	7	1					
5805-00-799-3225	5	6					
5805-00-799-3225	7	10					
	ADDITIONA	L LATEST	PART NUMBER ASSIGNMENTS	i			
PART		FIG.	ITEM				
NUMBER	FSCM	NO.	NO.				
NORDER	PBCM	110.	140.				
BA31062	28528	7	1				
SCD147777-3	80063	, 7	2				

		Z	DOPE A FORM,	JOT DOWN THE BOUT IT ON THIS TEAR IF OUT, FOLD DROP IT IN THE BATE 10 July 1975
	5840 - 3			23 Jan 74 Radar Set AN/200-76
E EXACT.			REITIS	IN THIS SPACE TELL WHAT IS WRONG
PAGE NO.	PARA- Graph	FIGURE NO.	TABLE NO.	AND WHAT SHOULD BE DONE ABOUT IT:
2-25	2-28			Recommend that the installation antenna alignment procedure be changed through the specify a 2° IFF antenna lag rather than 1°. REASON: Experience has shown that with only a 1° lag,
	-			the antenna servo system is too sensitive to wind gusting in excess of 05 knots, and has a tendency to rapidly accelerate and recelerate as it hunts, causing strain to the drive train. Hunting is minimized by adjusting the lag to 2 <sup>0</sup> without degradation of operation
3-10	3-3		3-1	Item 5, Function column. Change "2 db" to "3db." REASON: The rejustment procedure for the TRANS POWER FAULT indicator calls for a 3 db (500 watts) adjust- ment to light the TRANS POWER FAULT indicator.
5-6	5-8			Add new step f.l to read, "Replace cover plate removed in the plate is above."
		TOO	_	REASON: To replace the cover plate.
		FO3	S.	Zone C 3. On J1-2, change "+24 VDC to "+5 VDC." REASON: This is the output line of the 5 VDC power supply. + 24 VDC is the input voltage.
	e.grade M. De			SIGN HERE: 999-1776

!		$\frown$			RECOMMEND	ED CHAN	GES TO E	QUIPMENT	TECHNICAL MAN	IUALS
	7'5			S	OME	THOF			NG with thi	
	S			DOPF A	JOT DOWN BOUT IT ON TEAR IT OUT DROP IT IN	THIS ]	FROM: (Y	OUR UNIT'S C	OMPLETE ADDRESS	
1	PUBLICATI	ON NUMBE	R			DATE		TITLE		
	TM 11	-5805-2	262-20	Р		22 Ma	IV 78			
1	BE EXACT.				IN THIS SPAC	E TELL W	HAT IS WR	ONG		
1	PAGE NO.	PARA- GRAPH	FIGURE NO.	TABLE NO.	AND WHAT SI		DOBE AD	,0111.		
I I										
1										
										i
a phone v										
1										
1										
	TYPED NAM	E. GRADE	OR TITLE	AND TE	LEPHONE NUM	BER	SIGN HEF	E:		
		_,								
		rm 20	28-2	(TEST	') P.S11 A	YOUR OU	COPY OF T	TS TO KNOW	ABOUT YOUR MAI	NUAL "FIND," MAKE

FILL IN YOUR

FOLD BACK

DEPARTMENT OF THE ARMY

OFFICIAL BUSINESS

Commander US Army Communications and Electronics Materiel Readiness Command ATTN: DRSEL-MA-Q Fort Monmouth, New Jersey 07703 TEAR ALONG DOTTED LINE

ł

FOLD BACK

/', ["]2'] S	omething \	WRONG WITH THIS MANUAL?
DOPE A FORM, IT AND	.JOT DOWN THE BOUT IT ON THIS TEAR IT OUT, FOLD DROP IT IN THE	YOUR UNIT'S COMPLETE ADDRESS)
MAIL!	DATE	
TM 11-5805-262-20P	22 May 78	TITLE
BE EXACT PIN-POINT WHERE IT IS	IN THIS SPACE TELL WHAT IS W	RONG
PAGE PARA- FIGURE TABLE NO. GRAPH NO. NO.	AND WHAT SHOULD BE DOWE AB	
TYPED NAME, GRADE OR TITLE, AND TE	LEPHONE NUMBER SIGN HE	RE:

FILL IN YOUR UNIT'S ADDRESS

FOLD BACK

DEPARTMENT OF THE ARMY

OFFICIAL BUSINESS

Commander US Army Communications and Electronics Materiel Readiness Command ATTN: DRSEL-MA-Q Fort Monmouth, New Jersey 07703 TEAR ALONG DOTTED LIVE

ł

1

FOLD BACK

### REVERSE OF DA FORM 2028-2 (TEST)

	5					<u></u>		 TH THIS MAN	UAL?
26	S.	- 20 1	DOPE A	JOT DOWN BOUT IT ON TEAR IT OUT	THIS I				
×			IT AND MAIL!	TEAR IT OU? DROP IT IN	т́не	DATE		 · · · · · · · · · · · · · · · · · · ·	
	он нимве 1-5805-		)P	······	DATE 22 Ma	v 78	TITLE	 	
	PIN-PO			IN THIS SPAC	CE TELL W	HAT IS W	RONG		
PAGE NO.	PARA- GRAPH	FIGURE NO.	TABLE NO.	AND WHAT S	HOULD BE	DONE A	BOUTTI		
								, •	
						•			
						·			
							•		
PED NAN	ME, GRADE	OR TITLE	E, AND TE	LEPHONE NUM	BER	SIGN H	ERE:	 	
A FO	RM 20	28_1	(TFCT	)			NTS TO KHO	OUR MANUAL	

ļ

FILL	IN YOUF	R ESS	
	又_		

FOLD BACK

\_\_\_\_\_

DEPARTMENT OF THE ARMY

OFFICIAL BUSINESS

Commander US Army Communications and Electronics Materiel Readiness Command ATTN: DRSEL-MA-Q Fort Monmouth, New Jersey 07703 TEAR ALONG DOTTED LINE

ł

1

FOLD BACK

#### By Order of the Secretary of the Army:

BERNARD W. ROGERS General, United States Army Chief of Staff

Official:

J. C. PENNINGTON Brigadier General, United States Army The Adjutant General

Distribution:

ctive Army:	Units org under fol TOE :1 ea. U	NOINI
USAINSCOM (2)	11-15 29-56	
COE (1)	11-16 29-207	(2)
TSG (1)	11-17 29-610	) (2)
USAARENBD (1)	11-18	
DARCOM (1)	11-19	
TECOM (2)	11-25	
USACC (4)	11-26	
USACC-EUR (2)	11-27	
TRADOC (2)	11-35	
OS Maj Comd (4)	11-36	
HQ 7th Sig Cored (2)	11-37	
MDW (1)	11-38	
Armies (2)	11-39	
Corps (2)	11-45	
HISA (Ft Monmouth) (33)	11-46	
Fort Gillem (10)	11-47	
Fort Gordon (10)	11-85	
Fort Huachuca (10)	11-86	
Fort Carson (5)	11-87	
Ft Richardson (CERCOM Ofc) (2)	11-95	
Svc Colleges (1)	11-98	
USASIGS (5)	11-116	
USAICS (3)	11-117	
USAADS (2)	11-127	
USAFAS (2)	11-137	
USAARMS (2)	11-205	
USAIS (2)	11-206	
USAES (2)	11-207	
AD (1) except	11-215	
SAAD (30)	11-217	
LBAD (14)	11-218	
TOAD (14)	11-225	
SHAD (3)	11-226	
USA Dep (1)	11-227	
Sig Sec USA Dep (1)	11-228	
USMA (2)	11-237	
USAJFKCENMA (2)	11-303	
USATC&S (2)	11-327	
USAQMS (2)	11-357	
USAEPG (2)	11-367	
MAAG $(1)$	11-377	
USAMIS (1)	11-500 (AA-AC)	
USAERDAA (1)	11 000 (111 110)	
USAFPDAW (1)		
USAERDAW (1)		
USAERDAW (1) ARNG: State AG (3); Units-Same as	Active Army.	
	Active Army.	

PIN : 028470-000

This fine document...

Was brought to you by me:



# Liberated Manuals -- free army and government manuals

Why do I do it? I am tired of sleazy CD-ROM sellers, who take publicly available information, slap "watermarks" and other junk on it, and sell it. Those masters of search engine manipulation make sure that their sites that sell free information, come up first in search engines. They did not create it... They did not even scan it... Why should they get your money? Why are not letting you give those free manuals to your friends?

I am setting this document FREE. This document was made by the US Government and is NOT protected by Copyright. Feel free to share, republish, sell and so on.

I am not asking you for donations, fees or handouts. If you can, please provide a link to liberatedmanuals.com, so that free manuals come up first in search engines:

<A HREF=<u>http://www.liberatedmanuals.com/</u>>Free Military and Government Manuals</A>

Sincerely
Igor Chudov
http://igor.chudov.com/