# **TECHNICAL MANUAL**

# ORGANIZATIONAL AND DIRECT SUPPORT REPAIR PARTS AND SPECIAL TOOLS LISTS

**FOR** 

TEST SET, MODEM TS-4295/G (NSN 6625-01-276-5446) (EIC: N/A)

This publication is required for official use of for administrative or operational purposes only. Distribution is limited to US Government agencies. Other requests for this document must be referred to Commander, US Army Communications-Electronics Command and Fort Monmouth, ATTN: AMSEL-LC-LM-LT, Fort Monmouth, New Jersey 07703-5007.

DESTRUCTION NOTICE- Destroy by any method that will prevent disclosure of contents or reconstruction of the document.

THE NAVY, AND THE AIR FORCE

Technical Manual DEPARTMENTS OF THE ARMY

No. 11-6625-320 3P Technical Manual

No. EE190-BC-PLD-010/TS4295

Technical Order

No. 3307-3-313-4 Washington, DC, 15 June 1993

ORGANIZATIONAL AND DIRECT SUPPORT REPAIR PARTS AND SPECIAL TOOLS LISTS FOR TEST SET, MODEM TS-4295/G (NSN 6625-01-276-5446) (EIC: N/A) Current as of 15 March 1993

# REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve manual. If you find any mistakes, or you know a way to improve the procedures, please let us know. Mail your letter, DA Form 2028 (Recommended Changes to Publications and Blank Forms) or DA F 2028-2 located in back of this manual direct to: Commander, US Army Communications-Electronics Command and Fort Monmouth, ATTN: AMSEL-L -LT Fort Monmouth, New Jersey 077035007.

For Air Force, submit AFTO Form 22 (Technical Order System Publication Improvement Report and Reply) in accordance with paragraph 5, Section VI, TO 05-1. Forward direct to prime ALC/MST. For Navy, mail comments to the Commander, Space and Naval Warfare Systems Command, ATTN: SPAWAR 812, Washington, DC 203635100. In either case a reply will be furnished direct to you.

# **TABLE OF CONTENTS**

		Page	Illus/ Figure
Section I	Introduction	1	
II	Repair Parts List	1-1	1
Group 00	Modem Test Set TS-429KG1-11		
Section III	Special Tool List (Not applicable)		
Section IV	Cross-Reference Indexes		
	National Sock Number Index	I-2	
	Part Number Index	I-3	
	Figure and item Number Index	I-4	
	Reference designator Index	I-5	

i/(ii blank)

# CHAPTER1 INTRODUCTION

# 1. SCOPE

This manual lists and authorizes spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE); and other special support equipment required for the performance of organizational and direct support maintenance of the Eb/No Modem Test Set, TS-4295/G. It authorizes the requisitioning, issue, and disposition of spares, repair parts and special tools as indicated by the source, maintenance, and recoverability (SMR) codes.

# 2. GENERAL


This Repair Parts and Special Tools List is divided into the following sections:

- a Section II. Repair Parts List. A list of spares and repair parts authorized by this RPSTL for use in the performance of maintenance. This list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in ascending item number sequence, with the parts in each group listed in ascending item number sequence. Figure number are listed directly beneath the group header. Bulk materials are listed in item name sequence. Repair pa kits e listed separately in their own function group within Section II. Repair parts for repairable special tools are also listed in this section. Items listed are shown on the associated illustration.
- b. Section III. Special Tools L Not applicable.
- c. Section IV Cross-Reference Indexes. A list, in National item identification number (NIIN) sequence, of all National stock numbered items appearing in the listing, followed by a list in alphameric sequence of all part number appearing in the listings. National stock number and part number are cross- referenced to each illustration figure and item number appearance. The figure number and item number index lists figure and item numbers in m numeric sequence and cross-references National stock number, Commercial and Government Entity Code, and part numbers.

# 3. EXPLANATION OF COLUMNS (Section II and III)

a Item No. (Column (1)). Indicates the number used to identify items called out in the illustrations.

b. SMR Code (Column (2)). The source, maintenance, and recoverability (SMR) code is a five position code containing supply/requisitioning information, maintenance category authorization criteria and disposition instruction, as shown in the following breakout:

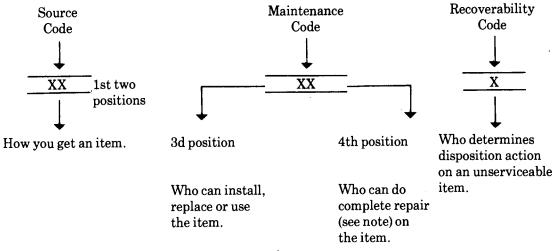


# NOTE


Complete repair: Maintenance capacity, capability, and authority to perform all corrective maintenance tasks of the "repair" function in a use/user environment in order to restore serviceability to a failed item.


(1) Source code. The source code tells you how to get an item needed for maintenance, repair or overhaul of an end item/equipment. Explanations of source codes follows:
 
# Code





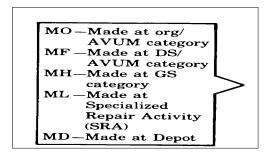

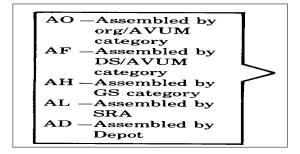

# Explanation

Stocked items: use the applicable NSN to request/ requisition items with these source codes. They are authorized to the level indicated by the code entered in the third position of the SMR

### NOTE

Items coded PC are subject to deterioration.

Items with these codes are not to be requested requisitioned individually. They are part of a kit which is authorized to the maintenance category indicated in the third position of the SMR code. The complete must be requisitioned and applied.

Items with ese codes am not to b requested requisitioned individually. They must be made number in the description and usable on code (UOC) column and listed in the Bulk Material group of the repair parts list. If the item is authorized to you by the third position code of the SMR code, but the source code indicates is made at a higher category, order the item from the higher category of maintenance.

Items with these codes are not to be requested requisitioned individually. The parts that make up the assembled item must be requisitioned or fabricated and assembled at the category of maintenance indicated by the source code. If the third position code of the SMR code authorizes you to replace the em, but the source code indicates the em is assembled at a higher category, order the item from the higher category of maintenance.

Code Explanation

- XA Do not requisition an "XA" coded item. Order is next higher assembly.
- XB If an "XB" item is not available from salvage, order t using the CAGEC and part number given.
- XC Installation drawing, diagram, instruction sheet, field service drawing, that is identified by manufacturer's part number.
- XD Item is not stocked. Order an "XD" coded item through normal supply channels using the CAGEC and part number given, m no NSN is available.

# NOTE

Cannibalization or controlled exchange, when authorized, may be used as a source supply for items with the above source codes, except for those source coded 'XA or those aircraft support items restricted by requirements of AR 750-1.

- (2) Maintenance code. Maintenance codes tell you the category of maintenance authorized to USE and REPAIR support items. The maintenance codes a entered in the third and fourth positions of the SMR code as follows:
  - (a) The maintenance code entered in the third position tells you the lowest maintenance category authorized to remove, replace, and use an item. The maintenance code entered in the third position will indicate authorization to one of the following categories of maintenance.

Code
Crew or operator maintenance done within organizational or aviation maintenance.
Crew or operator maintenance done within organizational or aviation maintenance.
Crew or operator maintenance done within organizational or aviation maintenance.
Crew or operator maintenance done within organizational or aviation maintenance.
Crew or operator maintenance done within organizational or aviation maintenance.
Crew or operator maintenance done within organizational or aviation maintenance.
Crew or operator maintenance done within organizational or aviation maintenance.
Crew or operator maintenance done within organizational or aviation maintenance.
Crew or operator maintenance done within organizational or aviation maintenance.
Crew or operator maintenance done within organizational or aviation maintenance.
Crew or operator maintenance done within organizational or aviation maintenance.
Crew or operator maintenance done within organizational or aviation maintenance.
Crew or operator maintenance done within organizational or aviation maintenance.
Crew or operator maintenance done within organizational or aviation maintenance.
Crew or operator maintenance done within organizational or aviation maintenance.
Crew or operator maintenance done within organizational or aviation maintenance.
Crew or operator maintenance done within organizational or aviation maintenance.
Crew or operator maintenance done within organizational or aviation maintenance.
Crew or operator maintenance done within organizational or aviation maintenance.
Crew or operator maintenance done within organizational or aviation maintenance.
Crew or operator maintenance done within organizational or aviation maintenance.
Crew or operator maintenance and use the item.
Crew or operator aviation unit category can remove, replace, and use the item.
Crew or operator aviation unit category can remove, replace, and use the item.
Crew or operator aviation unit category can remove, replace, and use the item.
Crew or operator aviation unit category can remove, repl

(b) The maintenance code entered in the fourth position tells whether or not the item is to be repaired and identifies the lowest maintenance category with the capability to do complete repair (i.e., perform all authorized repair functions). This position will contain one of the following maintenance codes.

# NOTE

Some limited repair may be done on the item at a lower category of maintenance, authorized by the Maintenance Allocation Chart (MAC) and SMR codes.

Code		Explanation
O F H L		Organizational or aviation unit is the lowest category that can do complete repair of the item. Direct support or aviation intermediate is the lowest category that can do complete repaire of the item. General support t is the lowest category that can do complete repair of the item. Specialized repair activity (designate e specialize d repair activity) is the lowest category that can do complete repair of the item.
D	-	Depot is the lowest category that can do complete repair of the item.
Z	-	Nonreparable. No repair is authorized.
В	-	No repair is authorized. (No parts or special tools are assigned for the maintenance of a "B" coded

(3) Recoverability code. Recoverability codes are assigned to items to indicate the disposition action on unserviceable items. The recoverability code is entered in the fifth position of the SMR code as follows:

(item.) However, the em may be reconditioned by adjusting, lubricating, etc., at the user category.

Code Application/Explanation

- Z Nonreparable item. When unserviceable, condemn and dispose of the item at the category of maintenance shown in the third position of SMR code.
- O- Reparable item. When uneconomically reparable, condemn and dispose of the item at organizational or aviation unit category.

# Recoverability

# Code Application/Explanation

- F- Reparable item. When uneconomically reparable, condemn and dispose of the item at direct support or aviation intermediate category.
- H- Reparable item. When uneconomically reparable, condemn and dispose of the item at general support category.
- D- Reparable item. When beyond lower category repair capability, return to depot Condemnation and disposal of item not authorized below depot category.
- L- Reparable item. Condemnation and disposal not authorized below specialized repair activity (SRA).
- A- Item requires special handling or condemnation procedures because of specific reasons (e.g., precious metal content, high dollar value, critical material, or hazardous material. Refer to appropriate manuals/directives for specific instructions.
- c. CAGEC (Column (3)). The Commercial and Government Entity Code (CAGEC) is a 5-digit numeric code which is used to identify the manufacturer, distributor, or Government agency, etc., that supplies the item.
- d Part Number (Column (4)). Indicates the primary number used by the manufacturer (individual, company, firm, corporation, or Government activity), which controls the design and characteristics of the item by means of is engineering drawings, specifications, standards, and inspection requirements to identify an item or range of items.

### NOTE

When you use an NSN to requisition an item, the item you receive may have a different part number from the part ordered.

- e. Description and Usable on Code (UOC) (Column (5)). This column includes the following information
  - (1) The Federal item name and, when required, a minimum description to identify the item.
- (2) The statement "END OF FIGURE" appears just below the last item description in Column (5) for a given figure in both section II and section III.
- f *Qty* (*Column* (6)). Indicates the quantity of the item used in the breakout shown onthe iustration figure, which is prepared for a functional group, subfunctional group, or an assembly. A "V appearing in this column in lieu of a quantity indicates that the quantity is variable and the quantity may vary from application to application.

# 4. EXPLANATION OF COLUMNS (Section IV)

- a. National Stock Number (NSN) Index.
- (1) Stock number column. This column lists the NSN by National item identification number (NIIN) sequence. The NIIN consists of the last nine digs of the NSN. When using this column to locate an item, ignore the first four digits of the NSN. When requisitioning items use the complete NSN (13 digits) sequence.
- (2) Fig. column. This column lists the number of the figure where the item is identified/located. The illustrations am in numerical sequence in sections 1 and III.
- (3) Item column. The item number identifies the item associated with the figure listed in the adjacent Fig. column. This item is also identified by the NSN listed on the same line.
- b. Part Number Index. Part numbers in this index are listed by pan number in ascending alphmeric sequence.
  - (1) CAGEC column. This column lists the Commercial and Government Entity Code (CAGEC).
  - (2) Part number column. This column indicates the part number assigned to the item.
- (3) Stock number column. This column lists the National stock number for the associated part number and manufacturer identified in the part number and CAGEC columns to the left.
  - (4) Fig. column. This column lists the number of the figure where the item is identified/located in sections II and III.

- (5) Item column. The item number that number assigned to the item as it appears in the figure referenced in the adjacent figure number column.
- c. Figure and Item Number Index.
  - (1) Fig. column. is column lists the number of the figure where the item is identified/located in sections 1 and III.
- (2) Item column. The item number that number assigned to the item as it appears in the figure referenced in the adjacent figure number column
  - (3) Stock number column. This column lists the National stock number for the item.
- (4) CAGEC column. The Commercial and Government Entity Code (CAGEC) is a 5-digitnumeric code used to identify the manufacturer, distributor, or Government agency, etc., that supplies the item.
- (5) Part number column. Indicates the primary number used by the manufacturer (individual, firm, corporation, or Government activity), which controls the design and characteristics of the item by means of s engineering drawings, specifications, standards, and inspection requirements to identify an item or range of items.
- d. .Reference Designator Index.
- (1) Ref des column. This column lists the reference designator in alphanumeric sequence for items indexed on the figure listed in the column to the right.
  - (2) Figure column. is column lists the number of the figure where the item is identified/located.
- (3) Item column. The item number identifies the item associated with the figure in the adjacent figure column.

# **5.SPECIAL INFORMATION**

- a Assembly Instructions. Detailed assembly instructions for items source coded to be assembled from component spare/repair parts are found in TM 11-625-3205-13. Items that make up the assembly are listed immediately following the assembly item enty or reference is made to an applicable figure.
- b. Associated Publications. The publications listed below pertain to the Modem test Set, TS-4295/G and its components:

TM 11-11-6625-3205-13 Operator's Unit and Direct Support Maintenance Manual for Test Set,

Modem TS-4295/G

DMWR 11 -6625 3205 Depot Maintenance Work Requirements for TYest Set, Modem TS-4295/G

c. National Stock Numbers. National stock numbers (NSN's) that are missing from P source coded items have been applied for and will be added to this TM by future change/revision when they are entered in the Army Master Data File (AMDF. Until the NSN's are established and published, submit exception requisitions to: Commander, US Army Communications-Electronics Command and Fort Monmouth, ATTN: AMSEL-LC-MM, Fort Monmouth, NJ 07703-5007 for the part required to support your equipment.


# 6. HOW TO LOCATE REPAIR PARTS

- a. When National stock number part number is not known.
- (1) First Using the table of contents, determine the assembly group or subassembly group to which the item belongs. This is necessary since figures are prepared for assembly groups and subassembly groups, and listings are divided into the same groups.
  - (2) Second. Find the figure covering the assembly group or subassembly group to which the item belongs.
  - (3) Third. Identify the item on the figure and note the item number.
- (4) Fourth. Refer to the Repair Parts Lists for the figure to find the part number for the item number noted on the figure.
  - (5) Fifth. Refer to the Part Number Index to find the NSN, if assigned.

- b. When National stock number or part number s known.
- (1) First Using the index of National stock numbers and part numbers, find the pertinent National stock number or part number. The NSN index is in National item identification number (NIIN) sequence (para 4a(1)). The par numbers in the pan number index are listed in ascending alphameric sequence (para 4b). Both indexes cross-reference you to the illustration figure and item number of the item you are looking for
- (2) Second. After fining the figure and item number, verify that the item is the one you're looking for then locate the item number in the repair parts list for the figure.

# 7. ABBREVIATIONS

Not applicable.

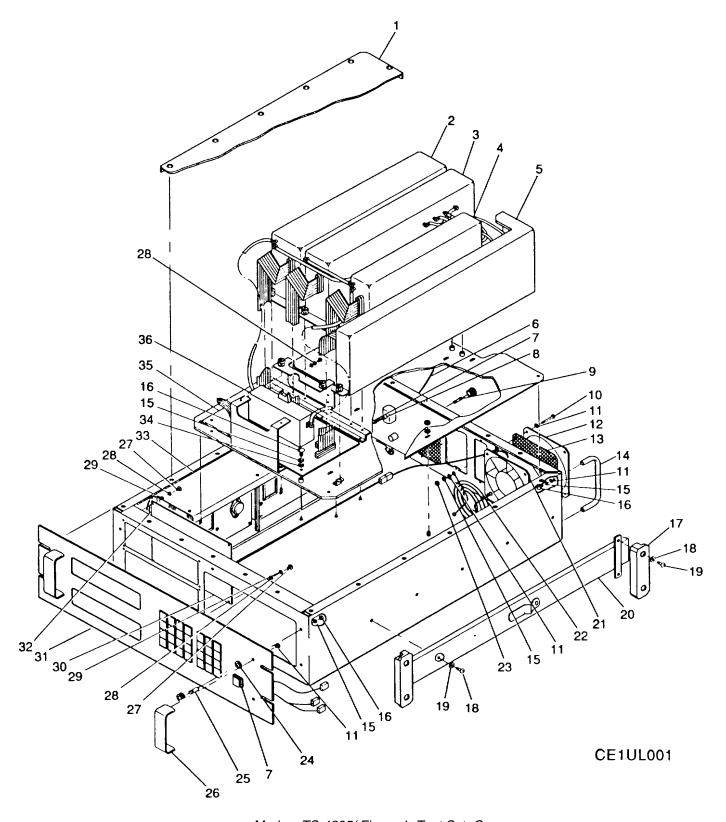

Modem TS-4295/ Figure 1. Test Set, G

(1) ITEM	SECTION (2) SMR	ON II (3)	(4) PART	TM11-6625-32 (5)	205-23P (6)
NO		CAGEC	NUMBER	DESCRIPTION AND USABLE ON CODES (UOC)	QTY
				GROUP 00 TEST SET MODEM TS-4295	
				FIGURE 1	
1	XBOZZ	80063	A3097921	COVER,ACCESS	1
2	PAODA	80063	A3097944	ELECTRONIC COMPOQEN	1
3	PAODA	80063	A3097942	ELECTRONIC COMPONEN (A1A3)SEE	1
				FIGURE B-9 B-10 AND B-II FOR PARTS	
	PAODA		A3097941	ELECTRONIC COMPONEN	1
5	PAODA	80063	A3097940	ELECTRONIC COMPONEN (AIA1)SEE	1
			• • • • •	FIGURE B-5 AND B-6 FOR PARTS	
-	XBDZZ		GA400	CABLE ASSEMBLY, POWE	1
7	XBDZZ		A3097901	CABLE ASSEMBLY, POWE	1
8	PADZZ		TY-23M	STRAP,TIEDOWN,ELECT	4
9	PAOZZ		FO2B250V2-1/2A	FUSE,CARTRIDGE	2 4
10 11		96906 96906	MS51957-37 MS15795-805	SCREW,MACHINE	4 15
		80063	A3097937	WASHER,FLATFRAME,AIR INLET	15
	XBFZZ		A3097935	GRILLE,METAL	1
	PAFZZ		10225-SS-0632-7	HANDLE,BOW	2
	PAFZZ		MS35338-136	WASHER,LOCK	20
	PAFZZ		MS51957-28	SCREW,MACHINE	6
17	XBFZZ		A3097925	BRACKET,ANGLE	4
18	PAFZZ		6301812	WASHER,FLAT	18
19	PAFZZ	96906	MS51958-63	SCREW,MACHINE	18
20	PAFZZ	06666	C300S222	SLIDE, DRAWER, EXTENS	2
21	PAFZZ	80063	A3097904	FAN,TUBEAXIAL	1
		25140	WFG36	GUARD,FAN IMPELLER	1
	PAFZZ		MS35649-264	NUT,PLAIN,HEXAGON	5
	XBDZZ		A3097903	CABLE ASSEMBLY,POWE	
25	PAOZZ	72619	507-3914-1437-60	LAMP,CARTRIDGE	1
	XBFZZ			HANDLE,MANUAL CONTR	2
27	PAFZZ		MS16995-9	SCREW,CAP,SOCKET HE	8
28	PAFZZ		MS35338-135	WASHER,LOCK	8
29	PAFZZ		MS15795-803	WASHER,FLAT	8
30	PAFZZ		A3097929-2	DISPLAY,OPTOELECTRO	1
31	PADZZ		A3097923	PANEL,INDICATOR	1
32 33	PAFZZ		A3097929-1 A3097931	DISPLAY,OPTOELECTRO POWER SUPPLY ASSEMB	1
34	PADDD PAFZZ		AN960C6	WASHER,FLAT	1 9
35	PAFZZ		A3097945	CIRCUIT CARD ASSEMB	9 1
36	XBDZZ		A3097959	BRACKET,ANGLE	1
37	PAFZZ		A3097927	ATTENUATOR,FIXED	1
38	PADZZ		AN960C4	WASHER,FLAT	24
39	PADZZ		MS51957-14	SCREW,MACHINE	2

END OF FIGURE

SECTION IV TM11-6625-3205-23P

<u> </u>	111111-0025	<u></u>						
NATIONAL STOCK NUMBER INDEX								
STOCK NUMBER	FIG.	ITEM	STOCK NUMBER	FIG.	ITEM			
5305-00-054-5648	1	39						
5305-00-054-6652	1	16						
5305-00-054-6661	1	10						
5305-00-059-3659	1	19						
6240-00-065-6812	1	25						
5305-00-068-5276	1	27						
5310-00-531-9514	1	34						
5310-00-595-6211	1	29						
5310-00-595-6772	1	18						
5310-00-722-5998	1	11						
5975-00-727-5153	1	8						
5310-00-929-6395	1	15						
5310-00-933-8118	1	28						
5310-00-934-9761	1	23						
5920-01-041-9168	1	9						
5310-01-141-6672	1	38						
5340-01-304-8614	1	20						
5998-01-307-9501	1	5						
5998-01-307-9502	1	4						
5998-01-307-9503	1	3						
5998-01-307-9504	1 1	2						
6130-01-313-4798	1 1	33						
5895-01-318-2208	1 1	31						
4140-01-320-6751	1 1	21						
5340-01-323-5676	1 1	14						
5980-01-325-8689		32						
5930-01-325-8690	1	30						
5985-01-357-3122	1	37						
5998-01-357-4372	1	35						
0990-01-001-4012	'	33						
			I-1					

# SECTION IV TM11-6625-3205-23P

# NATIONAL STOCK NUMBER AND PART NUMBER INDEX PART NUMBER INDEX

CAGEC	PART NUMBER	STOCK NUMBER	FIG.	ITEM
88044	AN960C4	5310-01-141-6672	1	38
81352	AN960C6	5310-00-531-9514	1	34
80063	A3097901		1	7
80063	A3097903		1	24
80063	A3097904	4140-01-320-6751	1	21
80063	A3097921		1	1
80063	A3097923	5895-01-318-2208	1	31
80063	A3097925		1	17
80063	A3097927	5985-01-357-3122	1	37
80063	A3097929-1	5980-01-325-8689	1	32
80063	A3097929-2	5980-01-325-8690	1	30
80063	A3097931	6130-01-313-4798	1	33
80063	A3097935		1	13
80063	A3097937		1	12
80063	A3097940	5998-01-307-9501	1	5
80063	A3097941	5998-01-307-9502	1	4
80063	A3097942	5998-01-307-9503	1	3
80063	A3097944	5998-01-307-9504	1	2
80063	A3097945	5998-01-357-4372	1	35
80063	A3097959		1	36
06666	C3005222	5340-01-304-8614	1	20
81349	F02B250V2-1/2A	5920-01-041-9168	1	9
05245	GA400		1	6
96906	MS15795-803	5310-00-595-6211	1	29
96906	MS15795-805	5310-00-722-5998	1	11
96906	MS16995-9	5305-00-068-5276	1	27
96906	MS35338-135	5310-00-933-8118	1	28
96906	MS35338-136	5310-00-929-6395	1	15
96906	MS35649-264	5310-00-934-9761	1	23
96906	MS51957-14	5305-00-054-5648	1	39
96906	MS51957-28	5305-00-054-6652	1	16
96906	MS51957-37	5305-00-054-6661	1	10
96906	MS51958-63	5305-00-059-3659	1	19
59730	TY-23M	5975-00-727-5153	1	8
25140	WFG36		1	22
06540	10225-55-0632-7	5340-01-323-5676	1	14
06540	10959-SS-1032-6B		1	26
72619	507-3914-1437-60 0	6240-00-065-6812	1	25
03640	6301812	5310-00-595-6772	1	18

SECTION IV TM11-6625-3205-23P

# **CROSS REFERENCE INDEXES**

#### FIGURE AND ITEM NUMBER INDEX FIG. **ITEM** STOCK NUMBER **CAGEC PART NUMBER** A3097921 5998-01-307-9504 A3097944 5998-01-307-9503 A3097942 5998-01-307-9502 A3097941 5998-01-307-9501 A3097940 GA400 A3097901 5975-00-727-5153 TY-23M F02B250V2-1/2A 5920-01-041-9168 5305-00-054-6661 MS51957-37 5310-00-722-5998 MS15795-805 A3097937 A3097935 5340-01-323-5676 10225-55-0632-7 5310-00-929-6395 MS35338-136 5305-00-054-6652 MS51957-28 A3097925 5310-00-595-6772 5305-00-059-3659 MS51958-63 5340-01-304-8614 C300s222 4140-01-320-6751 A3097904 WFG36 5310-00-934-9761 MS35649-264 A3097903 6240-00-065-6812 507-3914-1437-60 10959-SS-1032-6B 5305-00-068-5276 MS16995-9 5310-00-933-8118 MS35338-135 5310-00-595-6211 MS15795-803 5980-01-325-8690 A3097929-2

A3097923

A3097931

AN960C6

A3097945

A3097959

A3097927

AN960C4

MS51957-14

A3097929-1

5895-01-318-2208

5980-01-325-8689

6130-01-313-4798

5310-00-531-9514

5998-01-357-4372

5985-01-357-3122

5310-01-141-6672

5305-00-054-5648

SECTION IV TM 11-6625-3205-23P

# **CROSS-REFERENCE INDEXES**

# REFERENCE DESIGNATOR INDEX

REF. DES	FIG.	ITEM	REF.	DES.	FIG.	ITEM
A1A1	1	5				
A1A2	1	4				
A1A3	1	3				
A1A4	1	2				
A1A5	1	35				
A1A6	1	37				
A2	1	31				
A3	1	33				
DS2	1	30				
DS3	1	32				
W3	1	24				
W4	1	7				
W5	1	21				

I-4

By Order of the Secretary of the Army:

GORDON R. SULLIVAN General, United States Army Chief of Staff

Official: Mitte of dento

MILTON H. HAMILTON Administrative Assistant to the Secretary of the Army

By Order of the Secretary of the Navy:

ROBERT ALES Rear Admiral United States Navy Command, Space and Naval Warfare Systems Command

By Order of the Secretary of the Air Force:

LARRY D. WELSH General, United States Air Force Chief of Staff

Official:

CHARLES D. McDONALD General United States Air Force Commander, A Force Logistics Command

# DISTRIBUTION:

To be distributed in accordance with DA Form 12-36-E, block 9459, requirements for TM 11-6625-3205-23P.

\*U.S GOVERNMENT PRINTING OFFICE: 1993-710-084/80244

# RECOMMENDED CHANGES TO EQUIPMENT TECHNICAL PUBLICATIONS



# SOMETHING WRONG WITH THIS PUBLICATION?

THEN. . JOT DOWN THE DOPE ABOUT IT ON THIS FORM, CAREFULLY TEAR IT OUT, FOLD IT AND DROP IT IN THE MAIL

FROM: (PRINT YOUR UNIT'S COMPLETE ADDRESS)

DATE SENT

PUBLICATION NUMBER

PUBLICATION DATE

PUBLICATION TITLE

TM 11-5825-270-10

BE EXACT. . .PIN-POINT WHERE IT IS

23 Jul 81

IN THIS SPACE TELL WHAT IS WRONG

Radio Frequency R-2176/FRN

PAGE NO:	PARA- GRAPH	FIGURE NO	TABLE NO.	AND WHAT SHOULD	BE DONE ABOUT IT	:	
1							
PRINTED	NAME, GRAD	E OR TITLE	. AND TELEP	HONE NUMBER	SIGN HERE:		

DA 1 JUL 70 2028-2

PREVIOUS EDITIONS . ARE OBSOLETE.

P.S.—IF YOUR OUTFIT WANTS TO KNOW ABOUT YOUR RECOMMENDATION MAKE A CARBON COPY OF THIS AND GIVE IT TO YOUR HEADQUARTERS.

PIN: 071314-000