

DEPARTMENT OF THE ARMY TECHNICAL MANUAL

OPERATOR'S, ORGANIZATIONAL, DIRECT SUPPORT,
AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS
AND SPECIAL TOOLS LIST (INCLUDING DEPOT
MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS)
HEADSET, ELECTRICAL H-113/U
FSN 5965-504-6370

Headquarters, Department of the Army, Washington, D.C.
17 April 1973

Current as of October 1972

Section	Paragraph	Page
I. INTRODUCTION		
Scope	1-1	2
General	1-2	2
Explanation of columns	1-3	2
Special information	1-4	4
Location of repair parts	1-5	4
Abbreviations (Not applicable)	1-6	4
Reporting of equipment manual improvements	1-7	4
Items comprising an operable equipment	1-8	4
II. BASIC ISSUE ITEMS LIST (Not applicable)		
III. ITEMS TROOP INSTALLED OR AUTHORIZED LIST (Not applicable)		
IV. PRESCRIBED LOAD ALLOWANCE (Not applicable)		
V. REPAIR PARTS LIST (Not applicable)		
VI. SPECIAL TOOLS, TEST AND SUPPORT EQUIPMENT (Not applicable)		
VII. REPAIR PARTS LIST		6
VIII. SPECIAL TOOLS, TEST AND SUPPORT EQUIPMENT (Not applicable)		
IX. INDEX-FEDERAL STOCK NUMBER AND REFERENCE NUMBER CROSS-REFERENCE TO FIGURE AND ITEM NUMBER		7

* This manual supersedes TM 11-5965-221-15P, 21 March 1962.

SECTION I. INTRODUCTION

1-1. Scope

This manual lists basic issue items, items troop installed or authorized, repair parts, and special tools required by the crew/operator for operation and required for the performance of organizational, direct support, general support, and depot maintenance of the H-113/U. The PCCN for the H-113/U is GCMAAY for all models.

1-2. General

This basic issue items, items troop installed or authorized, repair parts, and special tools list is divided into the following sections -

a. *Basic Issue Items - Section II.* Not applicable.

b. *Items Troop Installed or Authorized List - Section III.* Not applicable.

c. *Prescribed Load Allowance (PLA) - Section IV.* Not applicable.

d. *Repair Parts List - Section V.* Not applicable.

e. *Special Tools, Test and Support Equipment - Section VI.* Not applicable.

f. *Repair Parts List - Section VII.* A list of repair parts authorized for the performance of maintenance at the direct support, general support, and depot level.

g. *Special Tools, Test and Support Equipment - Section VIII.* Not applicable.

h. *Index - Federal Stock Number and Reference Number Cross-Reference to Figure and Item Number - Section IX.* A list, in ascending numerical sequence, of all Federal stock numbers appearing in the listings, followed by a list, in alphameric sequence, of all reference numbers appearing in the listings. Federal stock number and reference numbers are cross-referenced to each illustration figure and item number or reference designation appearance.

1-3. Explanation of Columns

The following provides an explanation of columns found in the tabular list.

a. *Source, Maintenance, and Recoverability Codes (SMR).*

(1) *Source code.* Indicates the source for the listed items. Source codes are -

- | <i>Code</i> | <i>Explanation</i> |
|-------------|---|
| P - | Repair parts, special tools and test equipment supplied from the GSA/DSA or Army supply system and authorized for use at indicated maintenance categories. |
| P2 - | Repair parts, special tools and test equipment which are procured and stocked for insurance purposes because the combat or military essentiality of the end item dictates that a minimum quantity be available in the supply system. |
| P9 - | Assigned to items which are NSA design controlled: unique repair parts, special tools; test, measuring, and diagnostic equipment which are stocked and supplied by the Army COMSEC Logistic System and which are not subject to the provisions of AR 380-41. |
| P10 - | Assigned to items which are NSA design controlled: special tools, test, measuring, and diagnostic equipment for COMSEC support which are accountable under the provisions of AR 380-41 and which are stocked and supplied by the Army COMSEC Logistic System. |
| M - | Repair parts, special tools and test equipment which are not procured or stocked as such in the supply system but are to be manufactured at indicated maintenance levels. |
| A - | Assemblies which are not procured or stocked as such but are made up of two or more units. Such component units carry individual stock numbers and descriptions, are procured and stocked separately, and can be assembled to form the required assembly at indicated maintenance categories. |
| X - | Parts and assemblies that are not procured or stocked because the failure rate is normally below that of the applicable end item or component. The failure of such part |

<i>Code</i>	<i>Explanation</i>
	or assembly should result in retirement of the end item from the supply system.
X1-	Repair parts which are not procured or stocked. The requirement for such items will be filled by the next higher assembly or component.
X2-	Repair parts, special tools and test equipment which are not stocked and have no foreseen mortality. The indicated maintenance category requiring such repair parts will attempt to obtain the parts through cannibalization or salvage. The item may be requisitioned, with exception data, from the end item manager for immediate use.
G-	Major assemblies that are procured with PEMA funds for initial issue only as exchange assemblies at DS and GS level. These assemblies will not be stocked above DS and GS level or returned to depot supply level.

NOTE

Cannibalization or salvage may be used as a source of supply for any items source coded above except those coded X1 and aircraft support items as restricted by AR 700-42.

(2) *Maintenance code.* Indicates the lowest category of maintenance authorized to install the listed item. Capabilities of higher maintenance categories are considered equal or better. Maintenance codes are -

<i>Code</i>	<i>Explanation</i>
C	Crew/operator
O	Organizational maintenance
F	Direct support maintenance
H	General support maintenance
D	Depot maintenance

(3) *Recoverability code.* Indicates whether unserviceable items should be returned for recovery or salvage. Items not coded are nonrecoverable. Recoverability codes are -

<i>Code</i>	<i>Explanation</i>
R-	Repair parts (assemblies and components), special tools and test

<i>Code</i>	<i>Explanation</i>
	equipment which are considered economically reparable at direct and general support maintenance levels. When the item is no longer economically reparable, it is normally disposed of at the GS level. When supply considerations dictate, some of these repair parts may be listed for automatic return to supply for depot level repair as set forth in AR 710-1. When so listed, they will be replaced by supply on an exchange basis.
S-	Repair parts, special tools and test equipment, and assemblies which are economically reparable at DS and GS activities and which normally are furnished by supply on an exchange basis. When items are determined by a GSU to be uneconomically reparable, they will be evacuated to a depot for evaluation and analysis before final disposition.
T-	High dollar value recoverable repair parts, special tools and test equipment which are subject to special handling and are issued on an exchange basis. Such items will be repaired or overhauled at depot maintenance activities only. No repair may be accomplished at lower levels.
U-	Repair parts, special tools and test equipment specifically selected for salvage by reclamation units because of precious metal content, critical materials, high dollar value, or reusable casings or castings.

b. Federal Stock Number. Indicates the Federal stock number assigned to the item and will be used for requisitioning purposes.

c. Description. Indicates the Federal item name and a minimum description required to identify the item. The last line indicates the reference number followed by the applicable Federal Supply Code for Manufacturer (FSCM) in parentheses. The FSCM is used as an element in item identification to designate manufacturer or distributor or Government agency, etc., and is identified in SB 708-42.

d. Unit of Measure (U/M). Indicates the standard or basic quantity by which the

listed item is used in performing the actual maintenance function. This measure is expressed by a two-character alphabetical abbreviation, e.g., ea, in, pr, etc., and is the basis used to indicate quantities and allowances in subsequent columns. When the unit of measure differs from the unit of issue, the lowest unit of issue that will satisfy the required units of measure will be requisitioned.

e. Quantity Furnished with Equipment (Basic Issue Items Only). Not applicable.

f. Quantity Authorized (Items Troop Installed or Authorized Only). Not applicable.

g. Quantity Incorporated in Unit. This column indicates the quantity of the item used in the equipment.

h. 15-Day Organizational Maintenance Allowances. Not applicable.

i. 30-Day DS/GS Maintenance Allowances.

NOTE

Allowances in GS column are for GS maintenance only.

(1) The repair parts indicated by asterisk entries in separate allowance columns for DS and GS represent those authorized for use at that category of maintenance to be requisitioned on an "as required" basis, until stockage is based on demand in accordance with AR 710-2.

(2) Allowance quantities are indicated in the special tool lists section for special tools, TMDE, and other support equipment.

j. 1-Year Allowances Per 100 Equipments/Contingency Planning Purposes. Column intentionally left blank.

k. Depot Maintenance Allowance Per 100 Equipments. This column indicates opposite the first appearance of each item the total quantity authorized for depot maintenance of 100 equipments.

l. Illustration. Not applicable.

1-4. Special Information

Usable on codes are included in column 3. Uncoded items are applicable to all models. Identification of the usable on codes used in this publication are -

<i>Code</i>	<i>Used on</i>
AEI	H-113/U

1-5. Location of Repair Parts

a. This manual contains one cross ref-

erence index (sec IX) to be used to locate a repair part when either the Federal stock number or reference number (manufacturer's part number) is known. The first column in the index is prepared in numerical or alphanumeric sequence in ascending order. The reference numbers (manufacturer's part numbers) are listed immediately following the last listed Federal stock number in the index of Federal stock numbers.

b. When the Federal stock number or reference number is known, follow the procedures given in (1) and (2) below.

(1) Refer to the index of Federal stock numbers (sec IX), and locate the Federal stock number or reference number. The FSN and reference number are cross-referenced to the applicable figure and item number or reference designation.

(2) Refer to the repair parts list (sec VII) and locate the figure number (col 10a) and item number or reference designation (col 10b) as noted in the FSN index.

c. When the figure and item number or reference designation are known, scrutinize columns 10a and 10b, of the repair parts list (sec VII) until the item is located.

d. When the FSN, reference number, figure number, and item number are not known, scrutinize column 3 of the repair parts list (sec VII), which is arranged in alphabetical order.

1-6. Abbreviations

Not applicable.

1-7. Reporting of Equipment Manual Improvements

The reporting of errors, omissions, and recommendations for improving this publication by the individual user is encouraged. Reports should be submitted on DA Form 2028 (Recommended Changes to Publications) and forwarded direct to Commander, US Army Electronics Command, ATTN: AMSEL-MA-CW, Fort Monmouth, N. J., 07703.

1-8. Items Comprising An Operable Equipment

FSN 5965-504-6370 Headset, Electrical H-13/U (1 ea)

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REFERENCE NUMBER & MFR. CODE USABLE ON CODE	(4) UNIT OF MEAS	(5) QTY INC IN UNIT	(6) 30-DAY DS MAINT ALLOWANCE			(7) 30-DAY DS MAINT ALLOWANCE			(8) 1-YR ALWPER 100 EQUIP CNTGCTY	(9) DEPOT MAINT ALW PER 100 EQUIP	(10) ILLUSTRATION (a) (b) FIGURE ITEM NO. NO.	
					(a)	(b)	(c)	(a)	(b)	(c)			(a)	(b)
P--F--	5965-319-0642	ARM HEADBAND, EARPHONE MOUNTIN NO-REF-DE SIG SMD105224-1 (80063)	EA	1	*	*	*	*	*	*		5		
P--F--	5965-321-6694	ARM HEADBAND, EARPHONE MOUNTIN NO-REF-D ESIG SMD105224-11 (80063)	EA	1	*	*	*	*	*	*		5		
P--F--	5340-537-4204	BAND, CORD NO-REF-DESIG SMB105223 (80063)	EA	1	*	*	*	*	*	*		5		
P--F--	5995-537-5565	CORD ASSEMBLY, ELECTRICAL NO-REF-DESIG W-HEADBAND COVER HEAT SEALED IN POSITION SMD105214 (80063)	EA	1	*	*	*	*	*	*		5		
P--F--	5965-244-1741	CUSHION EARPHONE NO-REF-DESIG RUBBER: SLIP OVER TYPE: SCC53606 (80063)	EA	2	*	*	*	*	*	*		5		
P--F--	5965-280-3630	HEADBAND, HEADSET NO-REF-DESIG SINGLE FLAT BAND SCB84250 (80063)	EA	1	*	*	*	*	*	*		10		
P--F--	5305-537-8625	SCREW, EXTERNALLY RELIEVED BODY NO-REF-DE SIG MTS ARM TO HEADBAND: NO. 4-40 NC-2, 1- 8IN LG THR: SMB105231 (80063)	EA	2	*	*	*	*	*	*		5		
P--F--	5305-537-8233	SCREW, MACHINE NO-REF-DESIG MTS EARPHONE TO ARM; FIL H; NO. 5-40 NC-2A X 1-8" LG: FFS92-14S (81348)	EA	2	*	*	*	*	*	*		5		

INDEX - FEDERAL STOCK NUMBER AND REFERENCE NUMBER
 CROSS-REFERENCE TO FIGURE AND ITEM NUMBER

STOCK NUMBER	FIGURE NO.	ITEM NO.	STOCK NUMBER	FIGURE NO.	ITEM NO.
5305-537-8233			5965-280-3630		
5305-537-8625			5965-319-0642		
5340-537-4204			5965-321-6694		
5965-244-1741			5995-537-5565		

REFERENCE NO.	MFR CODE	FIG. NO.	ITEM NO.	REFERENCE NO.	MFR CODE	FIG. NO.	ITEM NO.
FFS92-14S	81348			SMB105231	80063		
SCB84250	80063			SMD105214	80063		
SCC53606	80063			SMD105224-1	80063		
SMB105223	80063			SMD105224-11	80063		

By Order of the Secretary of the Army:

CREIGHTON W. ABRAMS
General, United States Army
Chief of Staff

Official:

VERNE L. BOWERS
Major General, United States Army
The Adjutant General

Distribution:

To be distributed in accordance with DA Form 12-51, Organizational Maintenance requirements for AN/GLQ-2, AN/GRC-19, AN/GRC-26, AN/GRC-41, AN/GRC-46, AN/GRN-6, AN/GRR-5, AN/TRC-68, AN/TRC-133, AN/TRD-15, AN/URR-29, AN/VRC-24, and AN/VSC-1.

☆ U.S. GOVERNMENT PRINTING OFFICE : 1992 - 311-831 (60815)