TECHNICAL MANUAL

ORGANIZATIONAL MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST FOR

RADIO SET AN/ARC-164(V)12

(NSN 5821-01-071-5624)

AND

RADIO SET AN/ARC-164(V)16

(NSN 5841-01-122-7094)

HEADQUARTERS, DEPARTMENT OF THE ARMY 11 MAY 1984

TECHNICAL MANUAL

NO. 11-5841-286-20P

HEADQUARTERS DEPARTMENT OF THE ARMY WASHINGTON, DC, 11 May 1984

ORGANIZATIONAL MAINTENANCE REPAIR

PARTS AND SPECIAL TOOLS LIST

FOR

RADIO SET AN/ARC-164(V)12

(NSN 5821-01-071-5624)

AND

RADIO SET AN/ARC-164(V)16

(NSN 5841-01-122-7094)

Current as of 9 February 1984

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2 located in the back of this manual direct to: Commander, US Army Communications-Electronics Command and Fort Monmouth, ATTN: DR-SEL-ME-MP, Fort Monmouth, New Jersey 07703. In either case, a reply will be furnished direct to you.

Table of Contents

SECTION	I.	Introduction	Page 1	Figure
Group	00 R	Repair Parts List. adio Set AN/ARC-164(V)12 and Radio Set AN/ARC-164(V)16 0101 Switching Unit (IAI) 0201 Signal Data Converter (2A1) Mount MT-6017/ARC-164(V) (Unit3)	5 7 9	1 3 5 9
SECTION	III.	Special Tools List (Not applicable)		
	IV.	National Stock Number and Part Number Index	12	

^{*} This manual supersedes TM 11-5841-286-20P, 27 March 1981.

Illus

SECTION I

INTRODUCTION

Code

1. Scope

This manual lists spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE), and other special support equipment required for performance of organizational maintenance of the AN/ARC-164(V)12 and AN/ARC-164(V)16. It authorizes the requisitioning and issue of spares and repair parts as indicated by the source and maintenance codes.

2. General

This Repair Parts and Special Tools List is divided into the following sections:

a. Section II. Repair Parts List. A list of spares and repair parts authorized for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in numeric sequence, with the parts in each group listed in figure and item number sequence.

b. Section III. Special Tools List. Not applicable. c. Section IV. National Stock Number and Part Number Index. A list, in National item identification number (NIIN) sequence, of all National stock numbers (NSN) appearing in the listings, followed by a list, in alphanumeric sequence, of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration figure and item number appearance.

3. Explanation of Columns

a. Illustration. This column is divided as follows:

(1) *Figure number.* Indicates the figure number of the illustration on which the item is shown.

(2) *Item number.* The number used to identify item called out in the illustration.

b. Source, Maintenance, and Recoverability (SMR) Codes.

(1) *Source code.* Source codes indicate the manner of acquiring support items for maintenance, repair, or overhaul of end items. Source codes are entered in the first and second positions of the Uniform SMR Code format as follows:

Definition

Code

- PA- Item procured and stocked for anticipated or known usage.
- PB- Item procured and stocked for insurance pur-

Definition

pose because essentiality dictates that a minimum quantity be available in the supply system.

- PC- Item procured and stocked and which otherwise would be coded PA except that it is deteriorative in nature.
- PD- Support item, excluding support equipment, procured for initial issue or outfitting and stocked only for subsequent or additional initial issues or outfittings. Not subject to automatic replenishment.
- PE- Support equipment procured and stocked for initial issue or outfitting to specified mainte nance repair activities.
- PF- Support equipment which will not be stocked but which will be centrally procured on demand.
- PG— Item procured and stock to provide for sustained support for the life of the equipment. It is applied to an item peculiar to the equipment which, because of probable discontinuance or shutdown of production facilities, would prove uneconomical to reproduce at a later time.
- KD— An item of a depot overhaul/repair and not purchased separately. Depot kit defined as a kit that provides items required at the time of overhaul or repair.
- KF- An item of a maintenance kit and not purchased separately. Maintenance kit defined as a kit that provides an item that can be replaced at organizational or intermediate levels of maintenance.
- KB– Item included in both a depot overhaul/repair kit and a maintenance kit.
- MO- Item to be manufactured or fabricated at the organizational level.
- MF- Item to be manufactured or fabricated at the direct support maintenance level.
- MH– Item to be manufactured or fabricated at the general support maintenance level.
- MD- Item to be manufactured or fabricated at the depot maintenance level.
- AO— Item to be assembled at organization level.
- AF- Item to be assembled at direct support maintenance level.

Code

de

AH— Item to be assembled at general support maintenance level.

Definition

- AD— Item to be assembled at depot maintenance level.
- XA- Item is not procured or stocked because the requirements for the item will result in the replacement of the next higher assembly.
- XB- Item is not procured or stocked. If not available through salvage, requisition.
- XC— Installation drawing, diagram, instruction sheet, field service drawing, that is identified by manufacturer's part number.
- XD— A support item that is not stocked. When required, item will be procured through normal supply channels.

NOTE

Cannibalization or salvage may be used as a source of supply for any items source coded above except those coded XA and aircraft support items as restricted by AR 750-1.

(2) *Maintenance code.* Maintenance codes are assigned to indicate the levels of maintenance authorized to USE and REPAIR support items. The maintenance codes are entered in the third and fourth positions of the Uniform SMR Code format as follows:

(a) The maintenance code entered in the third position will indicate the lowest maintenance level authorized to remove, replace, and use the support item. The maintenance code entered in the third position will indicate one of the following levels of maintenance:

Code

de Application/Explanation

- C Crew or operator maintenance performed within organizational maintenance.
- O Support item is removed, replaced, used at the organizational level.
- F Support item is removed, replaced, used at the direct support level.
- H- Support item is removed, replaced, used at the general support level.
- D- Support items that are removed, replaced, used at depot, mobile depot, specialized repair activity only.

(b) The maintenance code entered in the fourth positions indicates whether the item is to be repaired and identifies the lowest maintenance level with the capability to perform complete repair (i.e., all authorized maintenance functions). This position will contain one of the following maintenance codes:

Application/Explanation

- O- The lowest maintenance level capable of complete repair of the support item is the organizational level.
- F- The lowest maintenance level capable of complete repair of the support item is the direct support level.
- H-The lowest maintenance level capable of complete repair of the support item is the general support level.
- D— The lowest maintenance level capable of complete repair of the support item is the depot level.
- L- Repair restricted to designated specialized repair activity.
- Z- Nonreparable. No repair is authorized.
- B— No repair is authorized. The item may be reconditioned by adjusting, lubricating, etc., at the user level. No parts or special tools are procured for the maintenance of this item.

(3) *Recoverability code.* Recoverability codes are assigned to support items to indicate the disposition action on unserviceable items. The recoverability code is entered in the fifth position of the Uniform SMR Code format as follows:

Recoverability

Code

codes Definition

- Z— Nonreparable item. When unserviceable, condemn and dispose at the level indicated in position 3.
- O— Reparable item. When uneconomically reparable, condemn and dispose at organizational level.
- F— Reparable item. When uneconomically reparable, condemn and dispose at the direct support level.
- H- Reparable item. When uneconomically reparable, condemn and dispose at the general support level.
- D— Reparable item. When beyond lower level repair capability, return to depot. Condemnation and disposal not authorized below depot level.
- L Reparable item. Repair, condemnation, and disposal not authorized below depot/specialized repair activity level.
- A— Item requires special handling or condemnation procedures because of specific reasons (i.e., precious metal content, high dollar value, critical material or hazardous material). Refer to appropriate manuals/directives for specific instructions.

c. National Stock Number. Indicates the National stock number assigned to the item and will be used for requisitioning purposes.

d. Federal Supply Code for Manufacturer (FSCM). The FSCM is a 5-digit numeric code listed in SB 708-41/42 which is used to identify the manufacturer, distributor, or Government agency, etc.

e. *Part Number.* Indicates the primary number used by the manufacturer (individual, company, firm, corporation, or Government activity), which controls the design and characteristics of the item by means of its engineering drawings, specifications, standards, and inspection requirements to identify an item or range of items.

NOTE

When a stock numbered item is requisitioned, the repair part received may have a different part number than the part being replaced.

f. Description. Indicates the Federal item name and, if required, a minimum description to identify the item.

g. Unit of Measure (U/M). Indicates the standard of the basic quantity of the listed item as used in performing the actual maintenance function. This measure is expressed by a two-character alphabetical abbreviation (e.g., ea, in, pr, etc). When the unit of measure differs from the unit of issue, the lowest unit of issue that will satisfy the required units of measure will be requisitioned.

h. Quantity Incorporated in Unit. Indicates the quantity of the item used in the breakout shown on the illustration figure, which is prepared for a functional group, subfunctional group, or an assembly.

4. Special Information

a. Usable on codes are shown in the description column. Uncoded items are applicable to all models. Identification of the usable on codes used in this publication are:

Code	Used on
EJM	AN/ARC-164(V)12
FFK	AN/ARC-164(V)16

b. The illustrations in this manual are identical to those published in TM 11-5841-286-30P. Only those parts assigned the third position SMR maintenance code "C" or "O" are listed in the tabular listing, therefore, there may be a break in the item number sequence. Only illustrations containing organiza-

tional authorized items appear in this manual.

c. The following publication pertains to the AN/ ARC-164(V)12 and AN/ARC-164(V)16 and their components:

TM 11-5841-286-13, Radio Set AN/ARC-164(V)12.

d. National stock numbers (NSN's) that are missing from P source coded items have been applied for and will be added to this TM by future change/ revision when they are entered in the Army Master Data File (AMDF). Until the NSN's are established and published, submit exception requisitions to: Commander, US Army Communications-Electronics Command and Fort Monmouth, ATTN: DRSEL-MM, Fort Monmouth, New Jersey 07703 for the part required to support your equipment.

5. How to Locate Repair Parts

a. When National stock number or part number is unknown.

(1) *First.* Using the table of contents, determine the functional group within which the item belongs. This is necessary since illustrations are prepared for functional groups and listings are divided into the same groups.

(2) *Second.* Find the illustration covering the functional group to which the item belongs.

(3) *Third.* Identify the item on the illustration and note the illustration figure and item number of the item.

(4) *Fourth.* Using the Repair Parts Listing, find the figure and item number noted on the illustration.


b. When National stock number or part number is known.

(1) *First.* Using the index of National Stock Numbers and Part Numbers, find the pertinent National stock number or part number. This index is in NIIN sequence followed by a list of part numbers in alphanumeric sequence, cross-referenced to the illustration figure number and item number.


(2) *Second.* After finding the figure and item number, locate the figure and item number in the repair parts list.

6. Abbreviations

Not applicable.

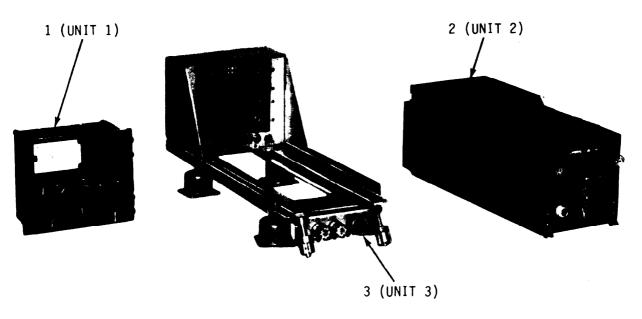

EL6EY001

 

	~	SECTIO	NII	- 10		TM 11-5841-286-20P		
	1) Ration	(2)	(3)	(4)	(5)	(6) DESCRIPTION	(7)	(8) ОТУ
(a) FIG NO.	ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	USABLE ON CODE	U/M	UNIT
	1 2 2	PAODD PAODD PAODD PAODD	5821-01-070-4433 5821-01-070-5844 5820-01-122-7094 5821-01-070-4271	80058 80058 80058 80058 80058	С10547/ARC-164(В.Т.2 1288/ARC-164(В.Т.1288A/ARC-164(В.Т.1288A/ARC-164(В.Т6017/ARC-164(GROUP 00 AN/ARC-164(V)12 AND AN/ ARC-164(V)16 CONTROL, RADIO SET	EA E A	1
						5		

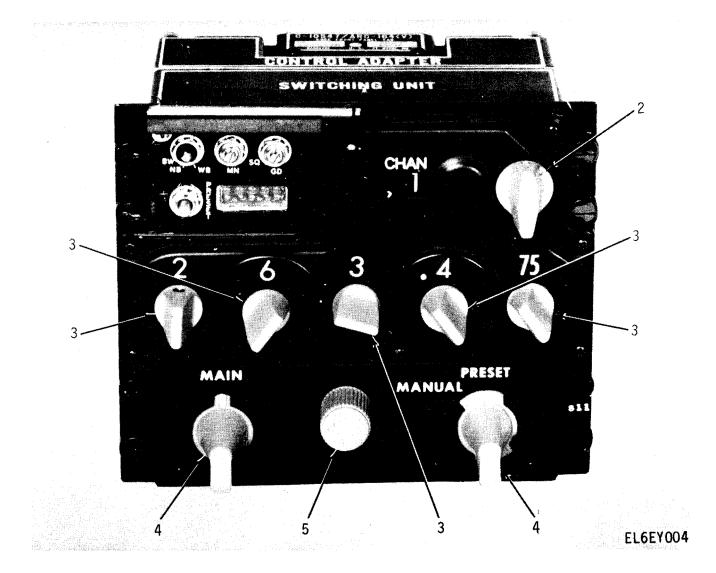


Figure 3. Switching Unit (1A1).


ı — — — — — — — — — — — — — — — — — — —		SECTION	II (3)	(1)		TM 11-5841-286-20P	- (=)	
ILLUST	1) Ration	(2)	(3)	(4)	(5)	(6) DESCRIPTION	(7)	(8) OTV
(a)G NO.	NO.	SMR	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	USABLE ON CODE	U/M	OTY INC UNIT
33333	2 3 4	PAOZZ PAOZZ PAOZZ PAOZZ	S355-01-004-9583 5355-01-089-3769 5355-01-004-9582 5355-01-004-9581	FSCM 37695 37695 37695	PART 148054-1 148059-1 148051-1 148053-1	GROUP 0101 SWITCHING UNIT (1A1) KNOB	EA EA EA	1 5 2 1
						7		





Figure 5. Signal Data Converter (2A1).

		SECTION				TM 11-5841-286-20P		
(1) ILULLUSTR	ATION	(2)	(3)	(4)	(5)	(6) DESCRIPTION	(7)	(8) OT)(
(a) FIG NO.	ITEM NO.	SMR	NATIONAL STOCK NUMBER		PART	DESCRIPTION		QTY INC UNIT
NÖ.	NO.	SMR CODE	NÚMBÉR	FSCM	PART NUMBER	USABLE ON CODE	U/M	UNIT
						GROUP 0201 SIGNAL DATA CONVERTER (2A1)		
5	2	PAOZZ	5920-00-280-4960	81349	F02A250V2A	FUSE,CAR TRIDGE	EA	2
						9		
				•		+		·

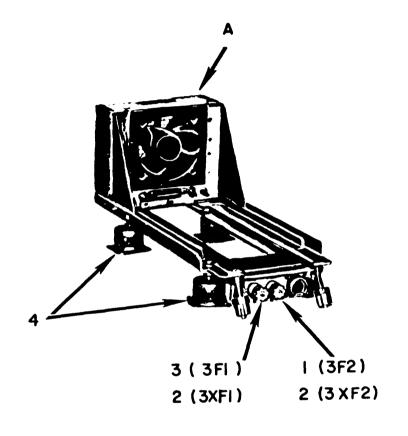

EL6EYØII

Figure 9. Radio Set AN/ARC-164(V)12.

		SECTION	II (D)	(1)		TM 11-5841-286-20P		I
ILLUST	(1) Rations	(2)	(3)	(4)	(5)	(6) Description	(/)	(8)
(a) FIG NO.	(b) ITEM NO.	SMR	NATIONAL STOCK		PART			OTY INC UNIT
NO.	NO."	SMR CODE	NUMBER	FSCM	PART NUMBER	USABLE ON CODE	U/M	UŃT
						GROUP 03 MOUNT MT-6017/ARC-164(V) (UNIT 3)		
9	1	PAOZZ	5920-00-280-4465	81349	F02A250V1AS	FUSE, CARTRIDGE	EA	1
9		PAOZZ		81349	F02A250V25AS	FUSE		1
9		PAOZZ	5920-00-556-0144	81349		FUSEHOLDER,EXTRACTO		2
9	4	PAOZZ		81860		MOUNT,RESILIENT		4
						11		
	ļ							

SECTION IV	NATIONAL	STOCK NUMBER AN	D PART NUMBER INDEX	TM 11-	5841-286-20P
STOCK NUMBER	FIGURE NO.	ITEM NO.	STOCK NUMBER	FIGURE NO.	ITEM NO.
5920-00-280-4465 5920-00 280-4960 5920-00-556-0144 5355-01-004-9581 5355-01-004-9582 5355-01-004-9583	9 5 9 3 3 3 3	1 2 3 5 4 2	5821-01-070-4271 5821-01-070-4433 5821-01-070-5844 5355-01-089-3769 5820-01-122-7094	1 1 3 1	3 1 2 3 2
FSCM PART NUMBER		FIGURE ITEM NO. NO.	FSCM PART NUMBER		FIGURE ITEM NO. NO.
81860 B44-CB-1O 80058 C-10547/ARC- 81349 FHN20G 81349 F02A250V2A 81349 F02A250V2A 81349 F02A250V1AS 81349 F02A250V25AS 80058 MT-6017/ARC-1		9 4 1 1 9 3 5 2 9 1 9 2 1 3	80058 RT-1288/ARC-164(V)12 80058 RT-1288A/ARC-164(V)16 37695 148051-1 37695 148053-1 37695 148054-1 37695 148059-1		1 2 1 2 3 4 3 5 3 2 3 3


7					SOMET	NONG	WRONG WITH THIS PUBLICATION	
	Θ)			WN THE	FROM	(PRINT YOUR UNIT'S COMPLETE ADDRESS) Commander Stateside Army Depot	
5			FORM, C	AREFUL	ON THIS		Stateside Army Depot ATTN: AMSTA-US Stateside, N.J. 07703	
			IN THE		ND DROP IT	DATE		
PUBLICA	TION NUME	BER			PUBLICATION	ATE	PUBLICATION TITLE	
Т	M 11-58	840-340	-20P		23 Jan 7	8	Radar Set AN/PRC-76	
BE EXA	1	OINT WHE			S SPACE TELL			
PAGE NO	PARA- GRAPH	FIGURE NO	TABLE NO	AND W	WHAT SHOULD I	BE DON	E ABOUT IT:	
33				For i <u>Reasc</u>	,		he NSN to read: 5835-00-134-91	
44		19				separ	n the junction box (item no. 5) rate item and as not called out	
45					Add the cover of the junction box as an item in the listing for figure 19. Reason: Same as above			
					M	R	-	
		Č,			r			
	NAME, GRAD				^{вер} -1776	SIGN HE	CH MM KO. Air. tak	

REVERSE OF DA FORM 2028-2

I I TEAR ALONG PERFORATED LINE FILL IN YOUR UNIT'S ADDRESS FOLD BACK DEPARTMENT OF THE ARMY AMPLE L 1 S Commander **US Army Communications-Electronics Command** and Fort Monmouth ATTN: DRSEL-ME-MP Fort Monmouth, New Jersey 07703


	/	\sim		I	RECOMMENDED CH	ANGES T	D EQUIPMENT 1		
	\Box	2.11	\backslash		SOME	TUINF	WRONG	WITH THIS PUBLI	CATION?
				DOPE A FORM. (JOT DOWN TH BOUT IT ON TH CAREFULLY TEA T, FOLD IT AN	E S R D	: (PRINT YOUR UI	NIT'S COMPLETE ADDRE	55)
	$\left(\right)$				T IN THE MAIL.	DATE			
		11-584	ber 1-286-	20P	PUBLICATIC		PUBLICATION TIT AN/ARC-16 AN/ARC-16	4(V)12 and 4(V)16	
	BE EXA	CT PIN-F PARA- GRAPH	FIGURE	TABLE NO.	IN THIS SPACE TELL				_
	PRINTED NA	ME GRADE O	R TITLE AND T	ELEPHONE NU	MBER	SIGN HE	RE		
	DA,5	AM 20	28-2		REVIOUS EDITIONS RE OBSOLETE	REC	OMMENDATION	I WANTS TO KNOW A MAKE A CARBON CO IR HEADOUARTERS.	ABOUT YOUR OPY OF THIS

REVERSE OF DA FORM 2028-2

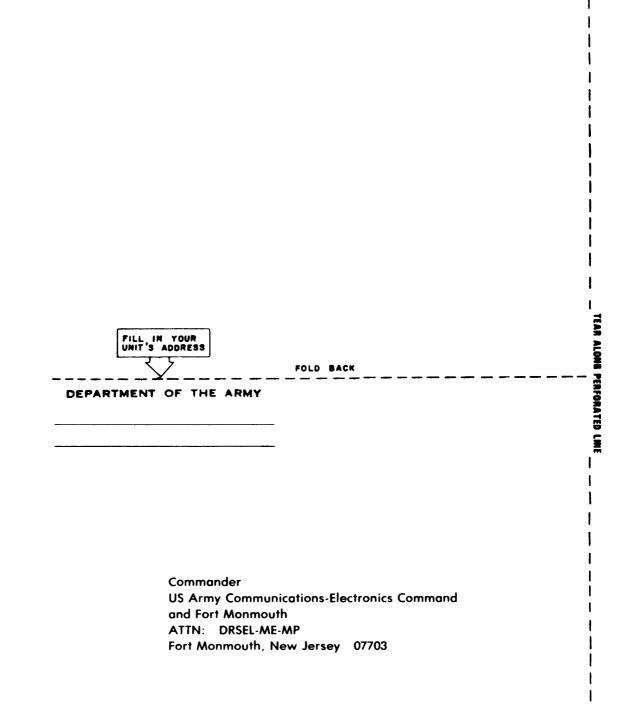

		R	ECOMMENDED CHA	NGES TO) EQUIPMENT	FECHNICAL PUBLICATION	NS
17 5."	1		SOMET	ning	WRONG	WITH THIS PUBLICATIO	N?
		DOPE AI FORM. C	OT DOWN THE BOUT IT ON THIS CAREFULLY TEAR FOLD IT AND			NIT'S COMPLETE ADDRESS)	
	1PV	DROP IT	IN THE MAIL.				
	5841-286-		PUBLICATION 11 May 19		PUBLICATION TIT AN/ARC-16 AN/ARC-16	4(V)12 and 4(V)16	
BE EXACT PAGE PAR NO. GRA		TABLE NO.	IN THIS SPACE TELL WH AND WHAT SHOULD B				
tear along perforated line							
E KLOKA							
ALONG L							
PRINTED NAME GRA	ADE OR TITLE AND T		IBER	SIGN HER	RE		
DA FORM	2028-2		EVIOUS EDITIONS E OBSOLETE	REC	OMMENDATION	I WANTS TO KNOW ABOUT MAKE A CARBON COPY OF IR HEADQU≜PTERS.	YOUR THIS




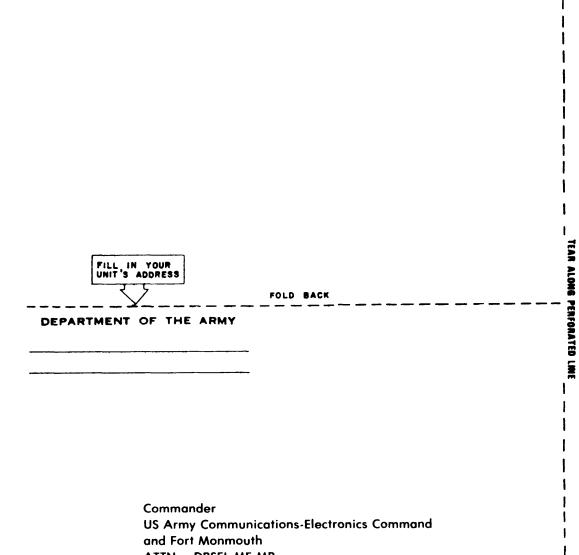

ATTN: DRSEL-ME-MP Fort Monmouth, New Jersey 07703

	2.11			SOMET	rnine	WRONG WITH THIS PUBLICATIO
			DOPE A FORM. (IOT DOWN THE BOUT IT ON THIS CAREFULLY TEAR , FOLD IT AND	FROM	A: (PRINT YOUR UNIT'S COMPLETE ADDRESS)
$ \langle \rangle$				IN THE MAIL.	DATE	SENT
	tion num 11-584		20P	PUBLICATION		PUBLICATION TITLE AN/ARC-164(V)12 and AN/ARC-164(V)16
BE EXA PAGE	CT PIN-F	FIGURE	TABLE	IN THIS SPACE TELL W AND WHAT SHOULD B		
NO.	GRAPH	NO.	NO.			
2						
		L			SIGN HI	FRF
PRINTED N	AME GRADE O	R TITLE AND	ELEPHONE NI	MBER		



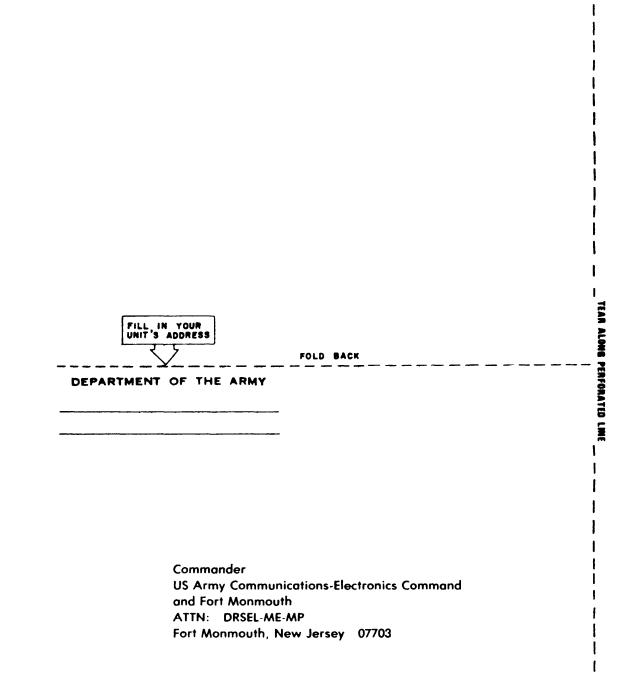

By Order of the Secretary of the Army:

JOHN A. WICKMAN JR. General, United States Army Chief of Staff

Official:

ROBERT M. JOYCE Major-General, United States Army The Adjutant General

DISTRIBUTION:

To be distributed in accordance with DA Form 12-36B requirements for AN/ARC-164.

★ U.S. GOVERNMENT PRINTING OFFICE: 1992-331-831/44211