TM 11-5831-201-24P

TECHNICAL MANUAL

ORGANIZATIONAL, DIRECT SUPPORT, AND
GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LIST
FOR

CONTROL, INTERCOMMUNICATION SET C-1611D/AIC (NSN 5831-00-933-9822) AND DISCRIMINATOR, DISCRETE SIGNAL MD-736/A (NSN 5821-00-937-7633)

H E A D Q U A R T E R S ,   D E P A R T M E N T   O F   T H E   A R M Y
15 SEPTEMBER 1987

ORGANIZATIONAL, DIRECT SUPPORT, AND
GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LIST
FOR

CONTROL, INTERCOMMUNICATION SET C-1611D/AIC (NSN 5831-00-933-9822) AND DISCRIMINATOR, DISCRETE SIGNAL MD-736/A (NSN 5821-00-937-7633)

Current as of 15 June 1987

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS
You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2 located in back of this manual direct to: Commander, US Army Communications-Electronics Command and Fort Monmouth, ATTN: AMSEL-ME-MP, Fort Monmouth, NJ 07703-5000.
In either case, a reply will be furnished direct to you.

Table of Contents

SECTION I

INTRODUCTION

1. Scope

This manual lists and authorizes spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE); and other special support equipment required for performance of organizational, direct support, and general support maintenance of the C-1611D/AIC and MD-736/A. It authorizes the requisitioning, issue, and disposition of spares, repair parts and special tools as indicated by the source, maintenance and recoverability (SMR) codes.

2. General

This Repair Parts and Special Tools List is divided into the following sections:

   a. Section II. Repair Parts List. A list of spares and repair parts authorized by this RPSTL for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in ascending numeric sequence, with the parts in each group listed in ascending item number sequence. Figure numbers are listed directly beneath the group header.
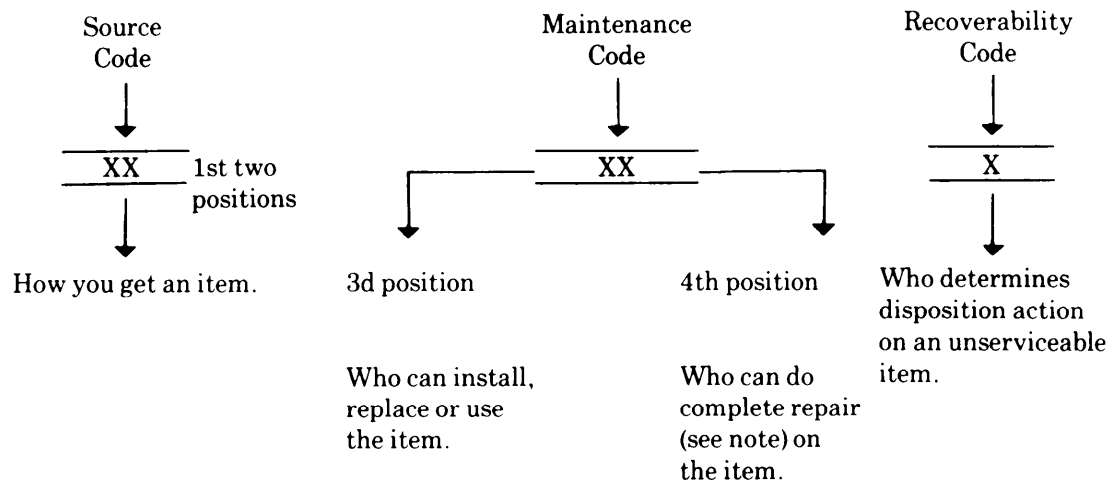
   b. Section III. Special Tools List. Not applicable.

   c. Section IV. National Stock Number and Part Number Index. A list, in National item identification number (NIIN) sequence, of all National stock numbered items appearing in the listing, followed by a list in alphanumeric sequence of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration figure and item number appearance.

3. Explanation of Columns (Section II and III)

   a. Item No. (Column (1)). Indicates the number used to identify items called out in the illustration.

   b. SMR Code (Column (2)). The source, maintenance, and recoverability (SMR) code is a five-position code containing supply/requisitioning information, maintenance category authorization criteria, and disposition instruction, as shown in the following breakout:

Source Code	Maintenance Code	Recoverability Code
↓	↓	↓
__XX__ 1st two positions	__XX__	__X__
↓	3d position ⟵ ⟶ 4th position	↓
How you get an item.	Who can install, replace or use the item. / Who can do complete repair (see note) on the item.	Who determines disposition action on an unserviceable item.

NOTE

Complete repair: Maintenance capacity, capability, and authority to perform all corrective maintenance tasks of the "Repair" function in a use/user environment in order to restore serviceability to a failed item.

(1) *Source code.* The source code tells you how to get an item needed for maintenance, repair, or overhaul of an end item/equipment. Explanations of source codes follows:

Code   *Explanation*

PA PB PC PD PE PF PG	Stocked items; use the applicable NSN to request/requisition items with these source codes. They are authorized to the category indicated by the code entered in the third position of the SMR code. **NOTE** Items coded PC are subject to deterioration.

KD KF KB	Items with these codes are not to be requested/requisitioned individually. They are part of a kit which is authorized to the maintenance category indicated in the third position of the SMR code. The complete kit must be requisitioned and applied.

MO—Made at org/AVUM category MF—Made at DS/AVUM category MH—Made at GS category ML—Made at Specialized Repair Activity (SRA) MD—Made at Depot	Items with these codes are not to be requested/requisitioned individually. They must be made from bulk material which is identified by the part number in the description and usable on code (UOC) column and listed in the Bulk Material group of the repair parts list. If the item is authorized to you by the third position code of the SMR code, but the source code indicates it is made at a higher category, order the item from the higher category of maintenance.

AO— Assembled by org/AVUM category AF— Assembled by DS/AVIM category AH—Assembled by GS category AL— Assembled by SRA AD—Assembled by Depot	Items with these codes are not to be requested/requisitioned individually. The parts that make up the assembled item must be requisitioned or fabricated and assembled at the category of maintenance indicated by the source code. If the third Position code of the SMR code authorizes you to replace the item, but the source code indicates the item is assembled at a higher category, order the item from the higher category of maintenance.

XA– Do not requisition an "XA" coded item. Order its next higher assembly.

XB— If an '"XB" item is not available from salvage. order it using the FSCM and part number given.

XC— Installation drawing, diagram, instruction sheet, field service drawing, that is identified by manufacturers part number.

XD– Item is not stocked. Order an "XD" coded item through normal supply channels using the FSCM and part number given, if no NSN is available.

NOTE

Cannibalization or controlled exchange, when authorized, may be used as a source of supply for items with the above source codes, except for those source coded "XA" or those aircraft support items restricted by requirements of AR 750-1.

(2) *Maintenance code.* Maintenance codes tell you the category of maintenance authorized to USE and REPAIR support items. The maintenance codes are entered in the third and fourth positions of the SMR code as follows:

(a) The maintenance code entered in the third position tells you the lowest maintenance category authorized to remove, replace, and use an item. The maintenance code entered in the third position will indicate authorization to one of the following categories of maintenance.

Code   *Application/Explanation*

C– Crew or operator maintenance done within organizational or aviation maintenance.
O– Organizational or aviation unit category can remove, replace, and use the item.
F— Direct support or aviation intermediate category can remove, replace, and use the item.
H—General support category can remove, replace, and use the item.
L— Specialized repair activity can remove, replace, and use the item.
D— Depot category can remove, replace, and use the item.

(b) The maintenance code entered in the fourth position tells whether or not the item is to be repaired and identifies the lowest maintenance category with the capability to do complete repair (i. e., perform all authorized repair functions). This position will contain one of the following maintenance codes.

NOTE

Some limited repair may be done on the item at a lower category of maintenance, if authorized by the Maintenance Allocation Chart (MAC) and SMR codes.

Code   *Application/Explanation*

O– Organizational or aviation unit is the lowest category that can do complete repair of the item.
F– Direct support or aviation intermediate is the lowest category that can do complete repair of the item.
H—General support is the lowest category that can do complete repair of the item.
L– Specialized repair activity (designate the specialized repair activity) is the lowest category that can do complete repair of the item.
D– Depot is the lowest category that can do complete repair of the item.
Z– Nonreparable. No repair is authorized.
B– No repair is authorized. (No parts or special tools are authorized for the maintenance of a "B" coded item). However, the item may be reconditioned by adjusting, lubricating, etc., at the user category.

(3) *Recoverability code.* Recoverability codes are assigned to items to indicate the disposition action on unserviceable items. The recoverability code is entered in the fifth position of the SMR Code as follows:

Recoverability
Codes   *Application/Explanation*

Z– Nonreparable Item. When unserviceable, condemn and dispose of the item at the category of maintenance shown in the third position of SMR Code.
O– Reparable item. When uneconomically reparable, condemn and dispose of the item at organizational or aviation unit category.
F– Reparable item. When uneconomically reparable, condemn and dispose of the item at direct support or aviation intermediate category.
H–Reparable item. When uneconomically reparable, condemn and dispose of the item at general support category.
D– Reparable item. When beyond lower category repair capability, return to depot. Condemnation and disposal of item not authorized below depot category.

L– Reparable item. Condemnation and disposal not authorized below specialized repair activity (SRA).

A—Item requires special handling or condemnation procedures because of specific reasons (e.g., precious metal content, high dollar value, critical material, or hazardous material). Refer to appropriate manuals/directives for specific instructions.

c. FSCM (Column (3)). The Federal Supply Code for Manufacturer (FSCM) is a 5-digit numeric code which is used to identify the manufacturer, distributor, or Government agency, etc., that supplies the item.

d. Part Number (Column (4)). Indicates the primary number used by the manufacturer (individual, company, firm, corporation, or Government activity), which controls the design and characteristics of the item by means of its engineering drawings, specifications, standards, and inspection requirements to identify an item or range of items.

NOTE

When you use a NSN to requisition an item, the item you receive may have a different part number from the part ordered.

e. Description and Usable on Code (UOC) (Column (5)). This column includes the following information.

(1) The Federal item name and, when required, a minimum description to identify the item.

(2) The statement "END OF FIGURE" appears just below the last item description in Column (5) for a given figure in both section II and section III.

f. Qty (Column (6)). Indicates the quantity of the item used in the breakout shown on the illustration figure, which is prepared for a functional group, subfunctional group, or an assembly. A "V" appearing in this column in lieu of a quantity indicates that the quantity is variable and the quantity may vary from application to application.

4. Explanation of Columns (Section IV)

a. National Stock Number (NSN) Index.

(1) Stock number column. This column lists the NSN by National item identification number (NIIN) sequence. The NIIN consists of the last nine digits of the NSN. When using this column to locate an item, ignore the first four digits of the NSN. When requisitioning items use the complete NSN (13 digits).

(2) *Fig. column.* This column lists the number of the figure where the item is identified/located. The illustrations are in numerical sequence in sections II and III.

(3) *Item column.* The item number identifies the item associated with the figure listed in the adjacent Fig. column. This item is also identified by the NSN listed on the same line.

b. Part Number Index. Part numbers in this index are listed by part number in ascending alphanumeric sequence.

(1) *FSCM column.* This column lists the Federal supply code for manufacturer (FSCM).

(2) *Part number column.* This column indicates the part number assigned to the item.

(3) *Stock number column.* This column lists the National stock number for the associated part number and manufacturer identified in the part number and FSCM columns to the left.

{4) *Fig. column.* This column lists the number of the figure where the item is identified/located in sections II and III.

(5) *Item column.* The item number is that number assigned to the item as it appears in the figure referenced in the adjacent figure number column.

5. Special Information

a. Fabrication Instructions. Detailed fabrication instructions for items source coded to be manufactured or fabricated are found in SB 11-631.

b. Associated Publications. The publications listed below pertain to the C-1611D/AIC and MD-736/A and their components:

SB 11-631, Identification Plates and Name Plates for Communication Equipment.

TM 11-5831-201-20, Control, Intercommunication Set C-1611D/AIC and Discriminator, Discrete Signal MD-736/A.

TM 11-5831-201-35, Control, Intercommunication Set C-1611D/AIC and Discriminator, Discrete Signal MD-736/A.

c. *National Stock Numbers.* National stock numbers (NSN's) that are missing from P source coded items have been applied for and will be added to this TM by future change/revision when they are entered in the Army Master Data File (AMDF). Until the NSN's are established and published, submit exception requisitions to: Commander, US Army Communications-Electronics Command and Fort Monmouth, ATTN: AMSEL-MM, Fort Monmouth, NJ 07703-5000 for the part required to support your equipment.

6. How to Locate Repair Parts

a. When National stock number or part number is not known.

(1) *First.* Using the table of contents, determine the assembly group or subassembly group to which the item belongs. This is necessary since figures are prepared for assembly groups and subassembly groups, and listings are divided into the same groups.

(2) *Second.* Find the figure covering the assembly group or subassembly group to which the item belongs.

(3) *Third.* Identify the item on the figure and note the item number.

(4) *Fourth.* Refer to the Repair Parts List for the figure to find the part number for the item number noted on the figure.

(5) *Fifth.* Refer to the Part Number Index to find the NSN, if assigned.

*b.* When National stock number or part number is known.

(1) *First.* Using the index of National stock numbers and part numbers, find the pertinent National stock number or part number. The NSN index is in National item identification number (NIIN) sequence (para 4a(1)). The part numbers in the part number index are listed in ascending alphanumeric sequence (para 4b). Both indexes cross-reference you to the illustration figure and item number of the item you are looking for.

(2) *Second.* After finding the figure and item number, verify that the item is the one you're looking for, then locate the item number in the repair parts list for the figure.
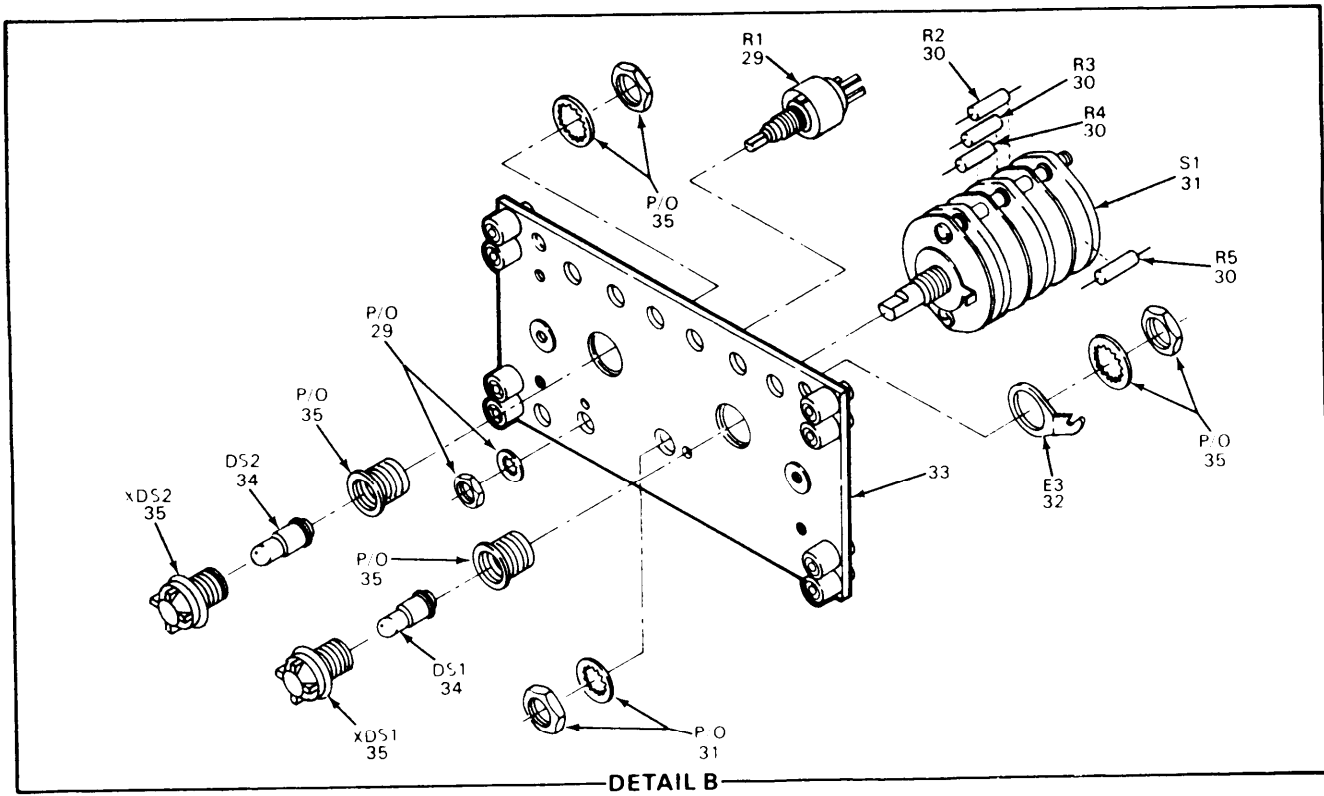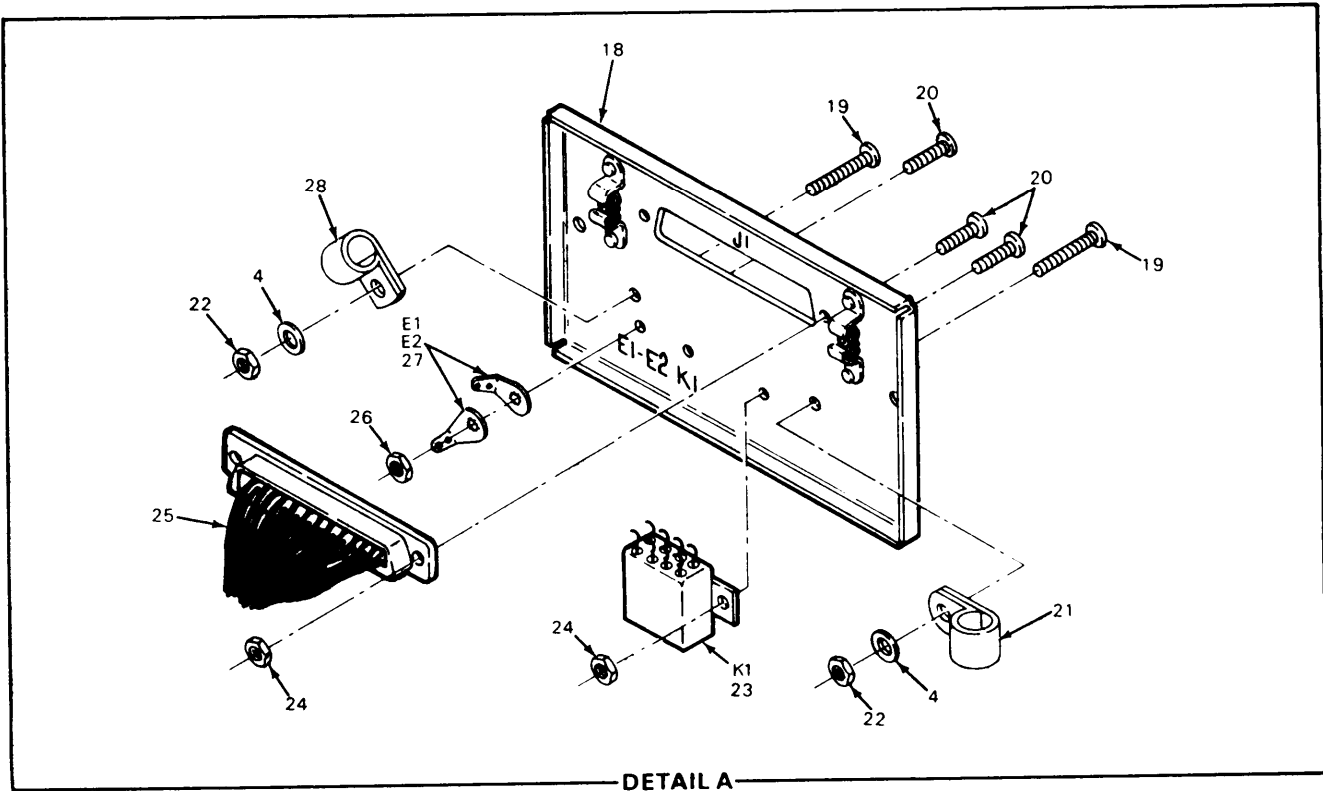
7. Abbreviations

Not applicable.
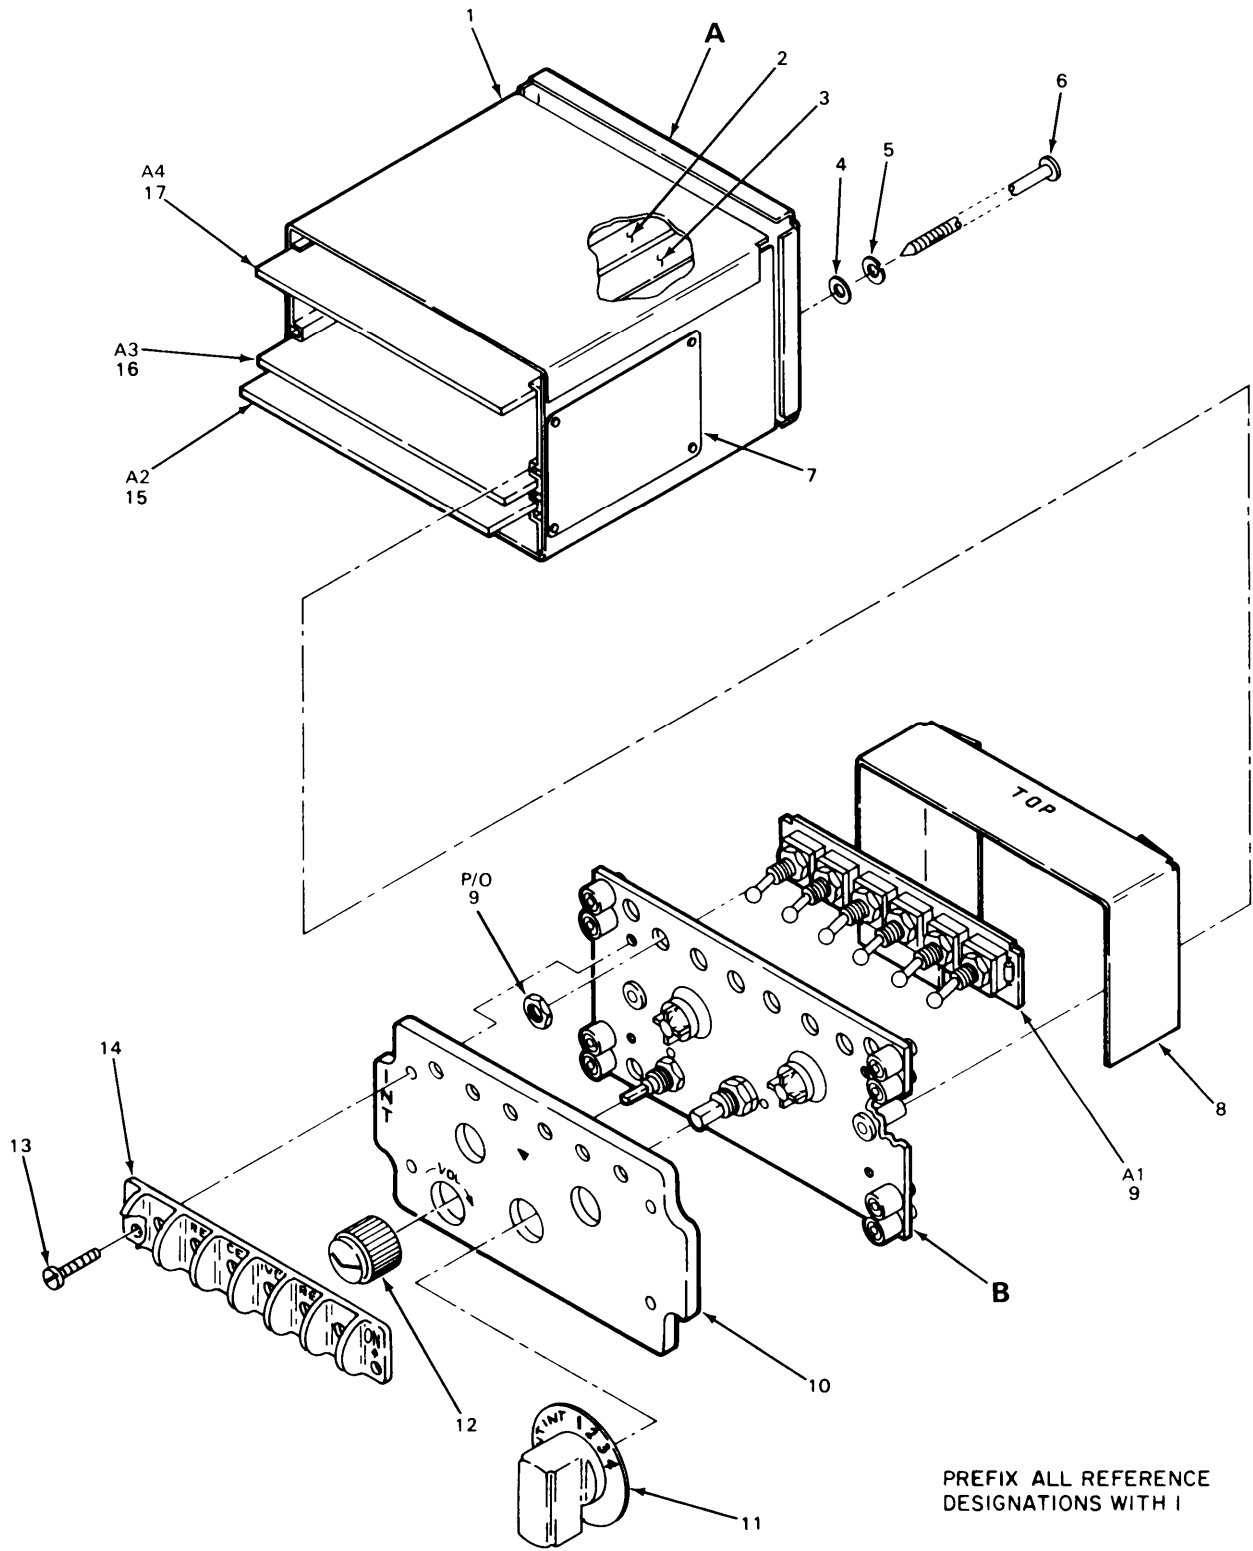
CEOCV001

Figure 1.   Control, Intercommunication Set
C-1611D/AIC (Sht. 1 of 2)

CE0CV002

Figure 1. Control, Intercommunication Set
C-1611D/AIC (Sht. 2 of 2)

(1)	(2)	(3)	(4)	(5)	(6)
ITEM	SMR		PART		
NO	CODE	FSCM	NUMBER	DESCRIPTION AND USABLE ON CODES(UOC)	QTY

GROUP OO CONTROL, INTERCOMMUNICATION
SET C-1611D/AIC

FIGURE 1

1	XBFZZ	80063	SM-D-379843	WRAPAROUND ASSEMBLY	1
2	PAFZZ	80063	SM-B-165178	PAD, CUSHION	2
3	PAFZZ	55901	375055001	INSULATOR, PLATE	1
4	PAFZZ	96906	MS27183-206	WASHER, FLAT	4
5	PAFZZ	96906	MS35338-41	WASHER, LOCK	2
6	PAFZZ	80063	SM-B-379809	SCREW, MACHINE	2
7	MDFZZ	80063	SM-C-165180	PLATE, IDENTIFICATIO (FOR	1
				INSTRUCTIONS SEE SB 11-631.)	
8	PAFZZ	80063	SM-C-379839	RETAINER MARKING, PR	1
9	PAFFF	80063	SM-D-379824	PRINTED CIRCUIT BOA (SEE FIGURE 2	1
				FOR BREAKDOWN)	
10	PAFZZ	80063	SM-D-379845	PANEL, FRONT	1
11	PAFZZ	80063	SM-C-379832	DIAL, CONTROL	1
12	PAOZZ	96906	MS91528-1N1B	KNOB	1
13	PAFZZ	96906	MS35214-15	SCREW, MACHINE	4
14	PAOZZ	80063	SM-C-379876	GUARD, SWITCH	1
15	PAFZZ	80063	SM-D-379825	AMPLIFIER SUBASSEMB	1
16	PAFZZ	80063	SM-D-379826	AMPLIFIER SUBASSEMB	1
17	PAFZZ	80063	SM-D-379827	AMPLIFIER SUBASSEMB	1
18	PAFZZ	80063	SM-D-379860	PANEL ASSEMBLY, REAR	1
19	PAFZZ	96906	MS35214-25	SCREW, MACHINE	2
20	PAFZZ	96906	MS35214-12	SCREW, MACHINE	5
21	PAFZZ	06915	N-5	CLAMP, LOOP	1
22	PAFZZ	88044	MS35649-262	NUT, PLAIN, HEXAGON	2
23	PAFZZ	80063	SMC379841	RELAY, ELECTROMAGNET	1
24	PAFZZ	80205	NAS671-C-4	NUT, PLAIN, HEXAGON	4
25	PAFZZ	80063	SM-D-379863	CABLE ASSEMBLY, SPEC	1
26	PAFZZ	96906	MS35649-42	NUT, PLAIN, HEX	1
27	PAFZZ	96906	MS77068-1	TERMINAL, LUG	2
28	PAFZZ	88818	115-38-204	CLAMP, LOOP	1
29	PAFZZ	01121	GW6856	RESISTOR, VARIABLE	1
30	PAFZZ	81349	RCR07G151JS	RESISTOR, FIXED, COMP	4
31	PAFZZ	80063	SM-A-379851	SWITCH, ROTARY	1
32	PAFZZ	79963	127	TERMINAL LUG	1
33	PAFZZ	80063	SM-D-379847	SUB-PANEL ASSEMBLY	1
34	PAOZZ	96906	MS25237-327	LAMP, INCANDESCENT	2
35	PAFZZ	96906	MS25010-A11A	LIGHT, HOLDER	2

END OF FIGURE

PREFIX ALL REFERENCE
DESIGNATIONS IAI

CEOCV003

Figure 2. Printed Wiring Board (A1)

(1) ITEM NO	(2) SMR CODE	(3) FSCM	(4) PART NUMBER	(5) DESCRIPTION AND USABLE ON CODES(UOC)	(6) QTY

GROUP 01 PRINTED WIRING BOARD (A1)

FIGURE 2

1	XBFZZ	80063	SM-D-379852	BOARD ASSEMBLY,PRIN	1
2	PAFZZ	81348	RCR07G472JS	RESISTOR,FIXED,COMP	8
3	PAFZZ	81349	RCR07G123JS	RESISTOR,FIXED,COMP	2
4	PAFZZ	81349	RCR20G150JS	RESISTOR,FIXED,COMP.	1
5	PAFZZ	81349	RCR07G912JS	RESISTOR,FIXED,COMP	1
6	PAFZZ	96906	MS75075-2	SWITCH,TOGGLE	6
7	PAFZZ	98278	30308	TERMINAL STUD	10

END OF FIGURE

1

2 (SEE NOTE)

3
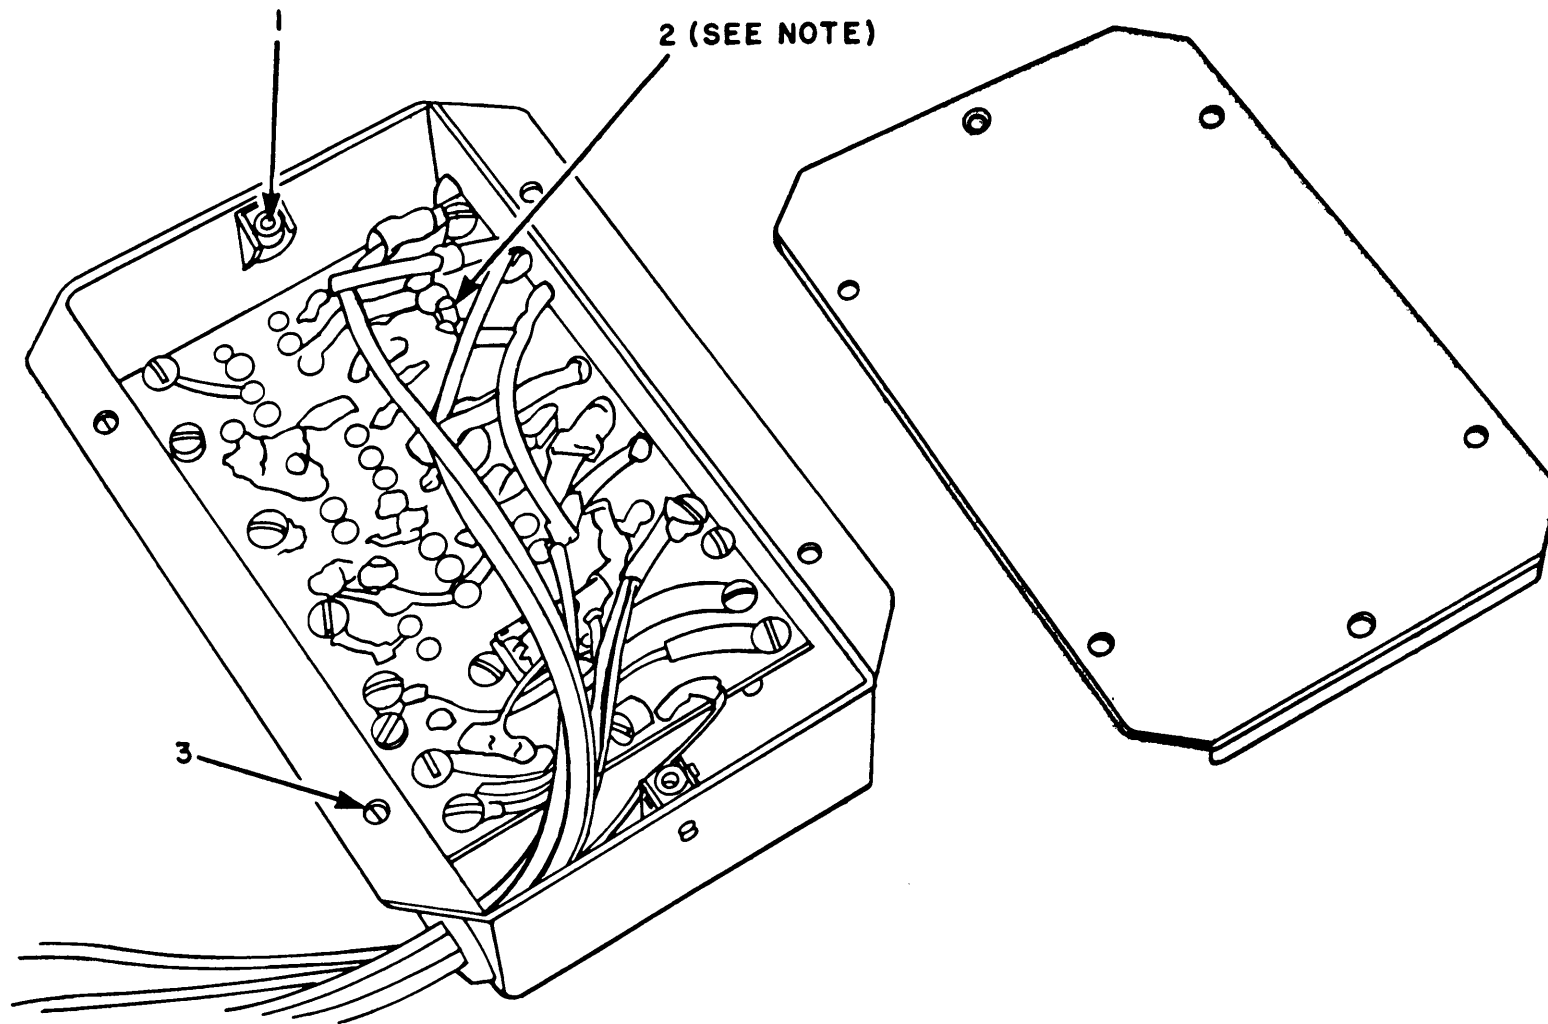
NOTE BOTTOM VIEW OF BOARD

CEOCVOO4

Figure 3. Discriminator, Discrete Signal MD-736/A.

(1) ITEM	(2) SMR CODE	(3) FSCM	(4) PART NUMBER	(5) DESCRIPTION AND USABLE ON CODES(UOC)	(6) QTY
				GROUP 00 DISCRIMINATOR, DISCRETE SIGNAL MD-736/A	
				FIGURE 3	
1	PAFZZ	96906	MS35190-223	SCREW,MACHINE	2
2	PAFFF	20309	ES-D-201O62	BOARD ASSEMBLY (SEE FIGURE 4 FOR PARTS BREAKDOWN)	1
3	PAFZZ	96906	MS35214-15	SCREW,MACHINE	4

END OF FIGURE

Figure 4. Board Assembly, ES-D-201062.

CEOCV005
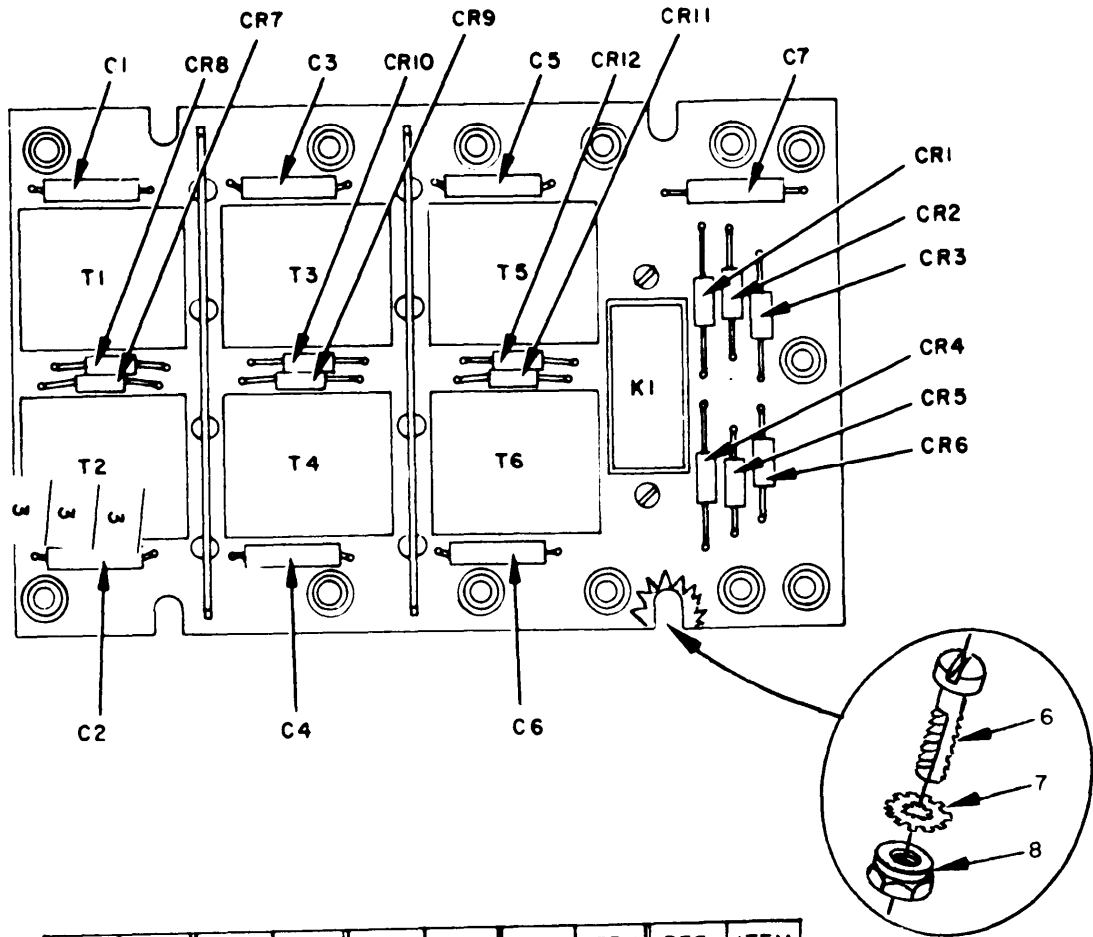
REF DES	ITEM NO	REF DES	ITEM NO	REF DES	ITEM NO	REF DES	ITEM NO	REF DES	ITEM NO
CR1	1	CR7	2	C1	3	C7	3	T5	5
CR2	1	CR8	2	C2	3	K1	4	T6	5
CR3	1	CR9	2	C3	3	T1	5		
CR4	1	CR10	2	C4	3	T2	5		
CR5	1	CR11	2	C5	3	T3	5		
CR6	1	CR12	2	C6	3	T4	5		

(1) ITEM NO	(2) SMR CODE	(3) FSCM	(4) PART NUMBER	(5) DESCRIPTION AND USABLE ON CODES(UOC)	(6) QTY

GROUP 01 BOARD ASSEMBLY, ES-D-201O62

FIGURE 4

1	PAFZZ	81349	JAN1N4246	SEMICONDUCTOR	6
2	PAFZZ	81349	JAN1N643	SEMICONDUCTOR	6
3	PAFZZ	16299	CY15C471J	CAPACITOR,FIXED,GLA.	7
4	PAFZZ	71482	RP7632G1	RELAY,ELECTROMAGNET	1
5	PAFZZ	94315	NE9026	TRANSFORMER.	6
6	PAFZZ	96906	MS35265-30	SCREW,MACHINE	4
7	PAFZZ	96906	MS20864-632	NUT,SELF-LOCKING	4
8	PAFZZ	96906	MS45904-54	WASHER, LOCK	4

END OF FIGURE

NATIONAL STOCK NUMBER AND PART NUMBER INDEX

NATIONAL STOCK NUMBER INDEX

NATIONAL STOCK NUMBER AND PART NUMBER INDEX

PART NUMBER INDEX

NATIONAL STOCK NUMBER AND PART NUMBER INDEX

PART NUMBER INDEX

FSCM	PART NUMBER	STOCK NUMBER	FIG.	ITEM
98278	30308		2	7
55901	375055001	5970-00-008-3300	1	3

RECOMMENDED CHANGES TO EQUIPMENT TECHNICAL PUBLICATIONS

SOMETHING WRONG WITH THIS PUBLICATION?

THEN JOT DOWN THE DOPE ABOUT IT ON THIS FORM. CAREFULLY TEAR IT OUT. FOLD IT AND DROP IT IN THE MAIL.

FROM (PRINT YOUR UNIT'S COMPLETE ADDRESS)
Commander
Stateside Army Depot
ATTN: AMSTA-US
Stateside, N.J. 07703-5007

DATE SENT
10 July 1975

PUBLICATION NUMBER	PUBLICATION DATE	PUBLICATION TITLE
TM 11-5840-340-20P	23 Jan 78	Radar Set AN/PRC-76

BE EXACT PIN-POINT WHERE IT IS				IN THIS SPACE TELL WHAT IS WRONG AND WHAT SHOULD BE DONE ABOUT IT:
PAGE NO	PARA-GRAPH	FIGURE NO	TABLE NO	
33				For item 2, change the NSN to read: 5835-00-134-9186. Reason: Accuracy.
44		19		Identify the cover on the junction box (item no. 5). Reason: It is a separate item and is not called out on figure 19.
45				Add the cover of the junction box as an item in the listing for figure 19. Reason: Same as above

PRINTED NAME GRADE OR TITLE AND TELEPHONE NUMBER
SSG I. M. DeSpirit of   999-1776

SIGN HERE

DA FORM 2028-2
1 JUL 79

PREVIOUS EDITIONS ARE OBSOLETE

P S--IF YOUR OUTFIT WANTS TO KNOW ABOUT YOUR RECOMMENDATION MAKE A CARBON COPY OF THIS AND GIVE IT TO YOUR HEADQUARTERS

TEAR ALONG PERFORATED LINE

SAMPLE

FILL IN YOUR
UNIT'S ADDRESS

FOLD BACK

DEPARTMENT OF THE ARMY

POSTAGE AND FEES PAID
DEPARTMENT OF THE ARMY
DOD 314

U.S. MAIL

OFFICIAL BUSINESS
PENALTY FOR PRIVATE USE $300

SAMPLE

Commander
US Army Communications-Electronics Command
  and Fort Monmouth
ATTN: AMSEL-ME-MP
Fort Monmouth, New Jersey 07703-5007

SOMETHING WRONG WITH THIS PUBLICATION?

THEN...JOT DOWN THE DOPE ABOUT IT ON THIS FORM. CAREFULLY TEAR IT OUT, FOLD IT AND DROP IT IN THE MAIL.

FROM: (PRINT YOUR UNIT'S COMPLETE ADDRESS

DATE SENT

PUBLICATION NUMBER	PUBLICATION DATE	PUBLICATION TITLE Control, Intercommunication Set C-1611D/AIC and Discriminator, Discrete Signal MD-736/A
TM 11-5831-201-24P	15 Sept 1987	

BE EXACT PIN-POINT WHERE IT IS				IN THIS SPACE TELL WHAT IS WRONG AND WHAT SHOULD BE DONE ABOUT IT:
PAGE NO.	PARA- GRAPH	FIGURE NO.	TABLE NO.	

PRINTED NAME GRADE OR TITLE AND TELEPHONE NUMBER

SIGN HERE

TEAR ALONG PERFORATED LINE

DA FORM 2028-2
I JUL 79

PREVIOUS EDITIONS
ARE OBSOLETE

P.S.--IF YOUR OUTFIT WANTS TO KNOW ABOUT YOUR RECOMMENDATION MAKE A CARBON COPE OF THIS AND GIVE IT TO YOUR HEADQUARTERS.

FILL IN YOUR
UNIT'S ADDRESS

FOLD BACK

DEPARTMENT OF THE ARMY

POSTAGE AND FEES PAID
DEPARTMENT OF THE ARMY
DOD 314

U.S.MAIL

OFFICIAL BUSINESS
PENALTY FOR PRIVATE USE $300

Commander
US Army Communications-Electronics Command
and Fort Monmouth
ATTN: AMSEL-ME-MP
Fort Monmouth, New Jersey 07703-5007

TEAR ALONG PERFORATED LINE

SOMETHING WRONG WITH THIS PUBLICATION?

THEN...JOT DOWN THE DOPE ABOUT IT ON THIS FORM. CAREFULLY TEAR IT OUT, FOLD IT AND DROP IT IN THE MAIL.

FROM: (PRINT YOUR UNIT'S COMPLETE ADDRESS

DATE SENT

PUBLICATION NUMBER	PUBLICATION DATE	PUBLICATION TITLE
TM 11-5831-201-24P	15 Sept 1987	Control, Intercommunication Set C-1611D/AIC and Discriminator, Discrete Signal MD-736/A

BE EXACT   PIN-POINT WHERE IT IS

PAGE NO.	PARA-GRAPH	FIGURE NO.	TABLE NO.	IN THIS SPACE TELL WHAT IS WRONG AND WHAT SHOULD BE DONE ABOUT IT:

PRINTED NAME GRADE OR TITLE AND TELEPHONE NUMBER

SIGN HERE

DA FORM 2028-2
I JUL 79

PREVIOUS EDITIONS ARE OBSOLETE

P.S.--IF YOUR OUTFIT WANTS TO KNOW ABOUT YOUR RECOMMENDATION MAKE A CARBON COPE OF THIS AND GIVE IT TO YOUR HEADQUARTERS.

TEAR ALONG PERFORATED LINE

FILL IN YOUR
UNIT'S ADDRESS

FOLD BACK

DEPARTMENT OF THE ARMY

_____

_____

OFFICIAL BUSINESS
PENALTY FOR PRIVATE USE $300

POSTAGE AND FEES PAID
DEPARTMENT OF THE ARMY
DOD 314

U.S.MAIL

Commander
US Army Communications-Electronics Command
  and Fort Monmouth
ATTN: AMSEL-ME-MP
Fort Monmouth, New Jersey 07703-5007

TEAR ALONG PERFORATED LINE

RECOMMENDED CHANGES TO EQUIPMENT TECHNICAL PUBLICATIONS

SOMETHING WRONG WITH THIS PUBLICATION?

THEN...JOT DOWN THE DOPE ABOUT IT ON THIS FORM. CAREFULLY TEAR IT OUT, FOLD IT AND DROP IT IN THE MAIL.

FROM: (PRINT YOUR UNIT'S COMPLETE ADDRESS

DATE SENT

PUBLICATION NUMBER	PUBLICATION DATE	PUBLICATION TITLE
TM 11-5831-201-24P	15 Sept 1987	Control, Intercommunication Set C-1611D/AIC and Discriminator, Discrete Signal MD-736/A

BE EXACT   PIN-POINT WHERE IT IS

IN THIS SPACE TELL WHAT IS WRONG AND WHAT SHOULD BE DONE ABOUT IT:

PAGE NO	PARA GRAPH	FIGURE NO	TABLE NO

TEAR ALONG PERFORATED LINE

PRINTED NAME GRADE OR TITLE AND TELEPHONE NUMBER

SIGN HERE

DA FORM 2028-2, 1 JUL 79

PREVIOUS EDITIONS ARE OBSOLETE

P.S.--IF YOUR OUTFIT WANTS TO KNOW ABOUT YOUR RECOMMENDATION MAKE A CARBON COPE OF THIS AND GIVE IT TO YOUR HEADQUARTERS.

FILL IN YOUR
UNIT'S ADDRESS

FOLD BACK

DEPARTMENT OF THE ARMY

POSTAGE AND FEES PAID
DEPARTMENT OF THE ARMY
DOD 314

U.S.MAIL

OFFICIAL BUSINESS
PENALTY FOR PRIVATE USE $300

Commander
US Army Communications-Electronics Command
and Fort Monmouth
ATTN: AMSEL-ME-MP
Fort Monmouth, New Jersey 07703-5007

TEAR ALONG PERFORATED LINE

By Order of the Secretary of the Army:

CARL E. VUONO
General, United States Army
Chief of Staff

Official:

R. L. DILWORTH
Brigadier General, United States Army
The Adjutant General